


# GCX Series

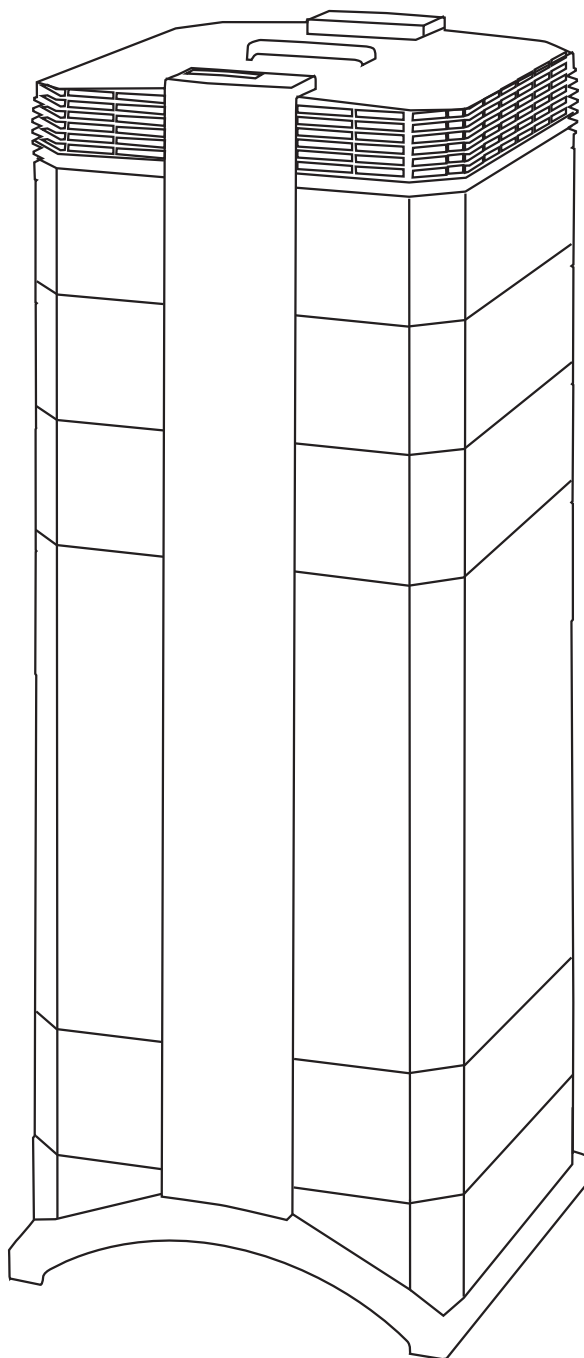

## Important Safety Instructions

---

### About This User's Manual

Congratulations on your purchase of this IQAir® high-performance air cleaning system. Please study this user manual carefully to familiarize yourself with the special features and functions of your IQAir® system and keep it in a safe place for future reference.

#### **Read these instructions before using the appliance:**

- Do not use this appliance as sole protection against harmful pollutants.
- Do not immerse the appliance in water or other liquids.
- Always disconnect the power from this appliance by unplugging the power cable before adding or removing parts and before cleaning.
- Do not operate this appliance if it has a damaged cord or plug, if the motor fan fails to rotate, if it is not working properly, if it has been dropped or damaged, or dropped into water.
- If the power cord of this appliance should become damaged, it may be replaced with a similar two-pole cord set, as is commonly used for computers and similar appliances.
- Only use this appliance for its intended purpose of air cleaning in non-industrial environments.
- Do not use this appliance in areas with very high concentrations of dusts or powder to prevent the danger of dust explosions.
- Do not use this appliance in explosive areas.
- Do not use attachments or filters not recommended by IQAir®.
- Do not use outdoors.
- Do not obstruct the air inlet and air outlet of the appliance.
- Do not place the appliance on a soft surface such as a bed or other soft furnishings.
- Only use this appliance in an upright position.
- Do not place next to a humidifier.
- Keep the power cord away from heated surfaces.
- Save these instructions for future reference.

The IQAir® Group reserves the right to change specifications contained in this document at any time and without prior notice.

© 2009 The IQAir® Group. All rights reserved. IQAir® is the registered trademark of The IQAir® Group. EvenFlow™ is a trademark of The IQAir® Group. IQAir® systems and filters are protected under U.S. patents 6 001 145 and 6 159 260. Other U.S., European and Asian patents pending.

## Table of Contents

---

|                                                                                         | Page      |
|-----------------------------------------------------------------------------------------|-----------|
| <b>Important Safety Instructions</b>                                                    | <b>2</b>  |
| <b>Chapter 1 – Air Cleaning Systems and Indoor Air Quality</b>                          | <b>4</b>  |
| 1. 1    Improving Indoor Air Quality                                                    | 4         |
| <b>Chapter 2 – Setting Up</b>                                                           | <b>5</b>  |
| 2. 1    Unpacking                                                                       | 5         |
| 2. 2    Choosing a Suitable Location                                                    | 6         |
| 2. 3    Connecting to Power                                                             | 6         |
| <b>Chapter 3 – The IQAir® System's Components</b>                                       | <b>7</b>  |
| 3. 1    Description of Housing Components                                               | 7         |
| 3. 2    Description of Removable Components                                             | 8         |
| 3. 3    How the IQAir® System Works                                                     | 8         |
| <b>Chapter 4 – Using the Control Panel</b>                                              | <b>9</b>  |
| 4. 1    Description of Control Panel                                                    | 9         |
| 4. 1. 1    Description of Control Panel Keys                                            | 9         |
| 4. 2    Control Panel Locking Function                                                  | 10        |
| 4. 3    Fan Speed and Air Delivery                                                      | 10        |
| 4. 3. 1    Regulating Fan Speed                                                         | 10        |
| 4. 3. 2    Air Exchange Rates in Differently Sized Rooms                                | 11        |
| 4. 4    Using the Menu Functions                                                        | 11        |
| 4. 4. 1    Menu Overview                                                                | 11        |
| 4. 4. 2    Filter Life Monitor                                                          | 12        |
| 4. 4. 3    Setting the Auto Timer                                                       | 13        |
| 4. 4. 4    Day-of-the-Week Timer                                                        | 14        |
| 4. 4. 5    Timer ON/OFF Fan Speed Selection Menu                                        | 14        |
| 4. 4. 6    Timer Information in the Control Panel                                       | 15        |
| 4. 4. 7    Time & Day Setting                                                           | 16        |
| 4. 4. 8    Filter Life Reset                                                            | 16        |
| 4. 4. 9    Changing Airflow Units                                                       | 17        |
| 4. 4. 10    Language Setting                                                            | 17        |
| <b>Chapter 5 – Using the Remote Control</b>                                             | <b>18</b> |
| 5. 1    Remote Control Elements and Functions                                           | 18        |
| 5. 2    Getting the Best Transmission Results                                           | 18        |
| 5. 3    Replacing the Battery of the Remote Control                                     | 19        |
| <b>Chapter 6 – Replacing Filters</b>                                                    | <b>19</b> |
| 6. 1    Location of the Filter Elements                                                 | 19        |
| 6. 2    Ordering Replacement Filters                                                    | 20        |
| 6. 3    Opening and Closing the Housing                                                 | 20        |
| 6. 3. 1    Troubleshooting when Closing the Housing                                     | 20        |
| 6. 4    Replacing the Pre-Filter (Filter 1)                                             | 20        |
| 6. 5    Replacing the Gas Phase Filter Cartridges<br>and Post-Filter Sleeves (Filter 2) | 21        |
| 6. 6    Discarding Used Filters                                                         | 22        |
| <b>Chapter 7 – Maintenance</b>                                                          | <b>22</b> |
| 7. 1    Cleaning the Housing                                                            | 22        |
| 7. 2    Maintenance-Free Fan                                                            | 22        |
| 7. 3    Technical Support and Repairs                                                   | 22        |
| 7. 4    IQAir Warranty                                                                  | 22        |
| <b>Chapter 8 – Anti-Tampering Kit Instructions</b>                                      | <b>23</b> |
| <b>Chapter 9 – IQAir® Accessories (Optional)</b>                                        | <b>25</b> |

## Chapter 1 – Air Cleaning Systems and Indoor Air Quality

### State-of-the-art filtration technology

Your IQAir advanced air cleaning system has been developed especially for the control of specific gaseous components. Thanks to advanced gas cartridge (GCX) filter technology, each model of the IQAir GCX Series has been optimized for the control of specific gaseous pollutant groups. The following model configurations are available:

- **IQAir® GCX VOC** for the control of volatile organic compounds
- **IQAir® GCX MultiGas** for the control of volatile organic compounds and many inorganic compounds
- **IQAir® GCX Chemisorber** for the control of many inorganic compounds and some organic compounds
- **IQAir® GCX AM** for the control of ammonia and amines

### 1.1 Improving Indoor Air Quality

Air cleaning can play an important role when it comes to improving indoor air quality. However, it should be noted that air cleaning should be used in conjunction with pollution source control and ventilation, wherever possible.

#### Strategy to improve indoor air quality

To tackle any indoor air quality problem, keep the following three-step strategy in mind:


1. Eliminate or reduce the air pollution source as much as possible. Source control is by far the most effective way to improve indoor air quality, since it sets out to deal with air pollution at the point of origin.
2. Ensure that sufficient fresh air is entering the room from outside. Air cleaners are not a substitution for sufficient ventilation. They are not able to reverse the conversion of oxygen ( $O_2$ ) into carbon dioxide ( $CO_2$ ), caused by breathing and combustion processes.
3. Ensure the IQAir® system can clean enough air to cope with your room size. The actual hourly air volume cleaned by the system should be at least double the air volume of your room. If the rate at which pollutants enter the room air is high or the indoor air quality requirements are stringent, the hourly air delivery of the system needs to exceed the room air volume several times. To achieve that level of air turnover, it may be necessary to employ more than one IQAir system, or consider an IQAir whole-house system.

#### Air Cleaning Results

Although air cleaners may be advertised and sold to be suitable for use in specific indoor environments and to deal with specific indoor air quality problems, the manufacturer and distributors make no claim as to the specific air cleaning results that are achieved under the user's individual operating conditions. The air quality improvements that can be realized with the IQAir® system (as with any air cleaner) in indoor environments depends to a significant degree on circumstantial factors, which are out of the control of the manufacturer or distributors. Important factors which will influence the air quality improvements that can be achieved in an indoor environment with an air cleaner include:

- Type of air pollutants present
- Intensity of the pollutant source(s)
- Pollutant concentration
- Size of the indoor environment (room size)
- Operating speed of the unit
- Number of air cleaners placed in the indoor environment
- Saturation state of the filters in the air cleaner

Consult a qualified specialist to determine an effective and comprehensive indoor air quality strategy.

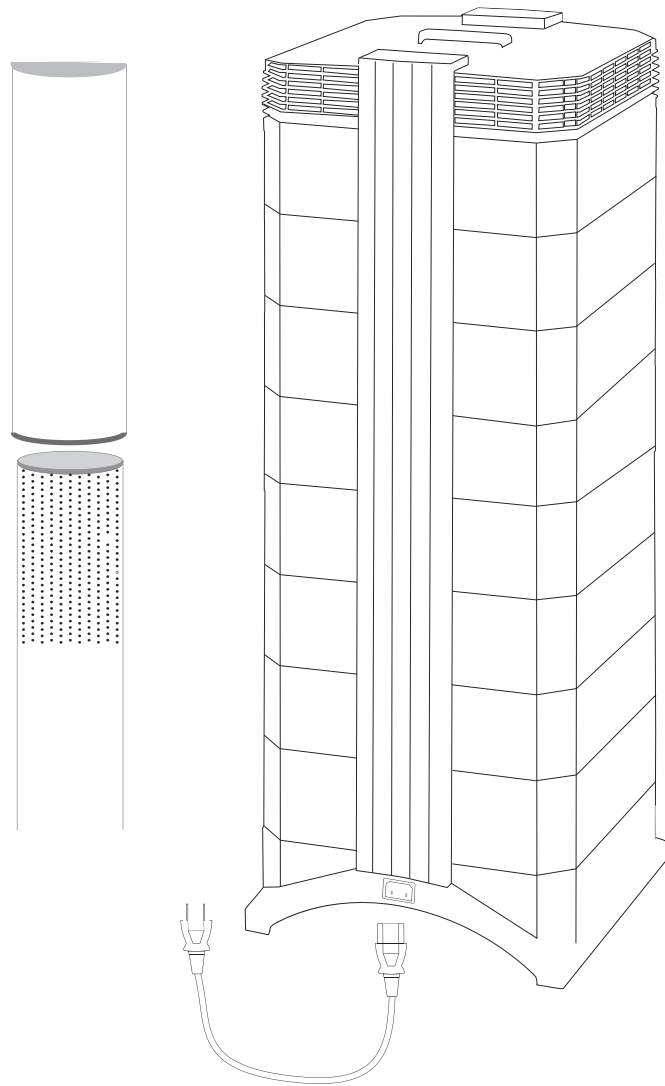


## 2.2 Choosing a Suitable Location

When choosing a suitable location for the IQAir system, keep the following considerations in mind:

- Choosing the most suitable room for the system will depend on where you would like the focus of the air cleaning efforts. Two main considerations are the time you spend in a particular room and the location of the main air pollution sources. As a general rule, the closer the system is located to the air pollution source, the better the air cleaning performance in the room.

Although an air cleaning result may be achieved in adjacent rooms, the main air cleaning will take place in the room where the system is located. For the best air cleaning results in adjacent rooms, make sure that doors to these rooms are left wide open.

- For best performance, the system should be positioned at least 12 inches (1 foot) away from the nearest vertical surface, such as a wall or a cupboard. In general, the more centrally the system is positioned, the better the performance.
- Position the system close to a power outlet and make sure that the power cord is positioned in a way that it does not present an obstacle.
- Make sure that the system is positioned in such a way that the control panel is easily accessible.

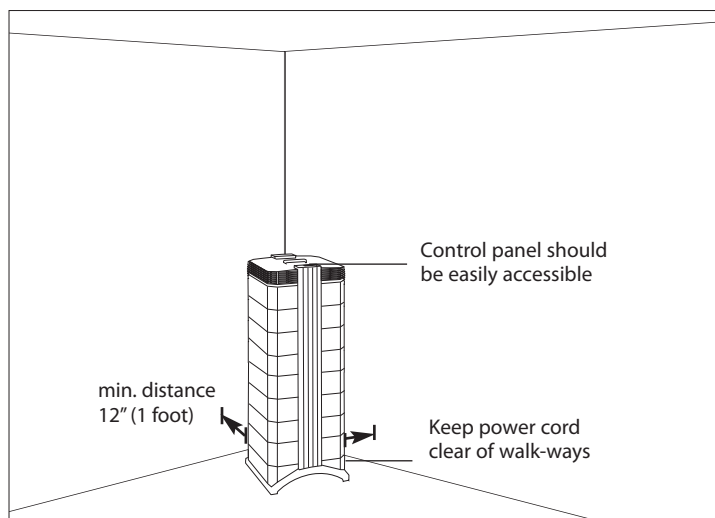


## 2.3 Connecting to Power

1. Plug the connector end of the power cord into the recessed power inlet socket on the back of the system.
2. Plug the other end of the power cord into a power outlet or power strip.

**Important:** The only way to disconnect power completely is to unplug the power cord.


**Do not use the IQAir® system when the power cord becomes damaged.** The power cord may be replaced with an approved cord with a two-pole plug. These power cords are commonly used for computers and similar appliances.

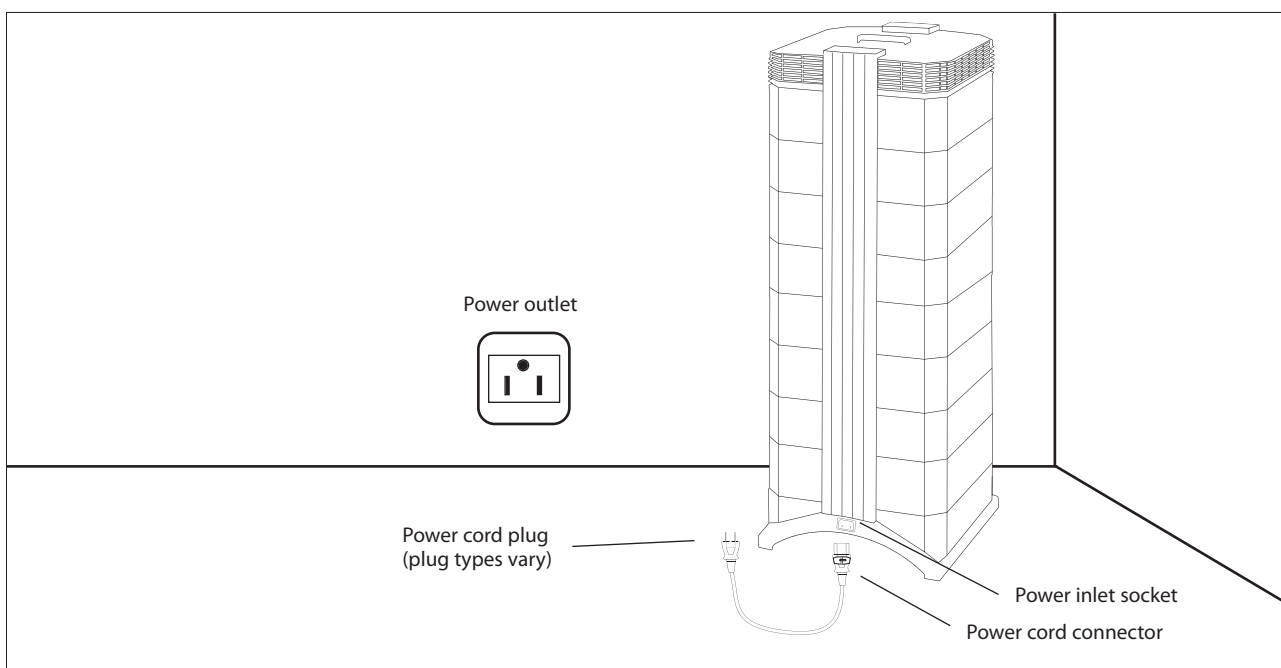

## Chapter 3 – The IQAir® System's Components

### 3.1 Description of Housing Components

The IQAir® system features a modular tower design in which all important filtration and air moving components are positioned vertically in-line, i.e. stacked on top of another. Air is drawn into the system at the base, and passes through several filter stages to be returned to the room via the diffuser on top of the system. The housing modules are held together by two locking arms.

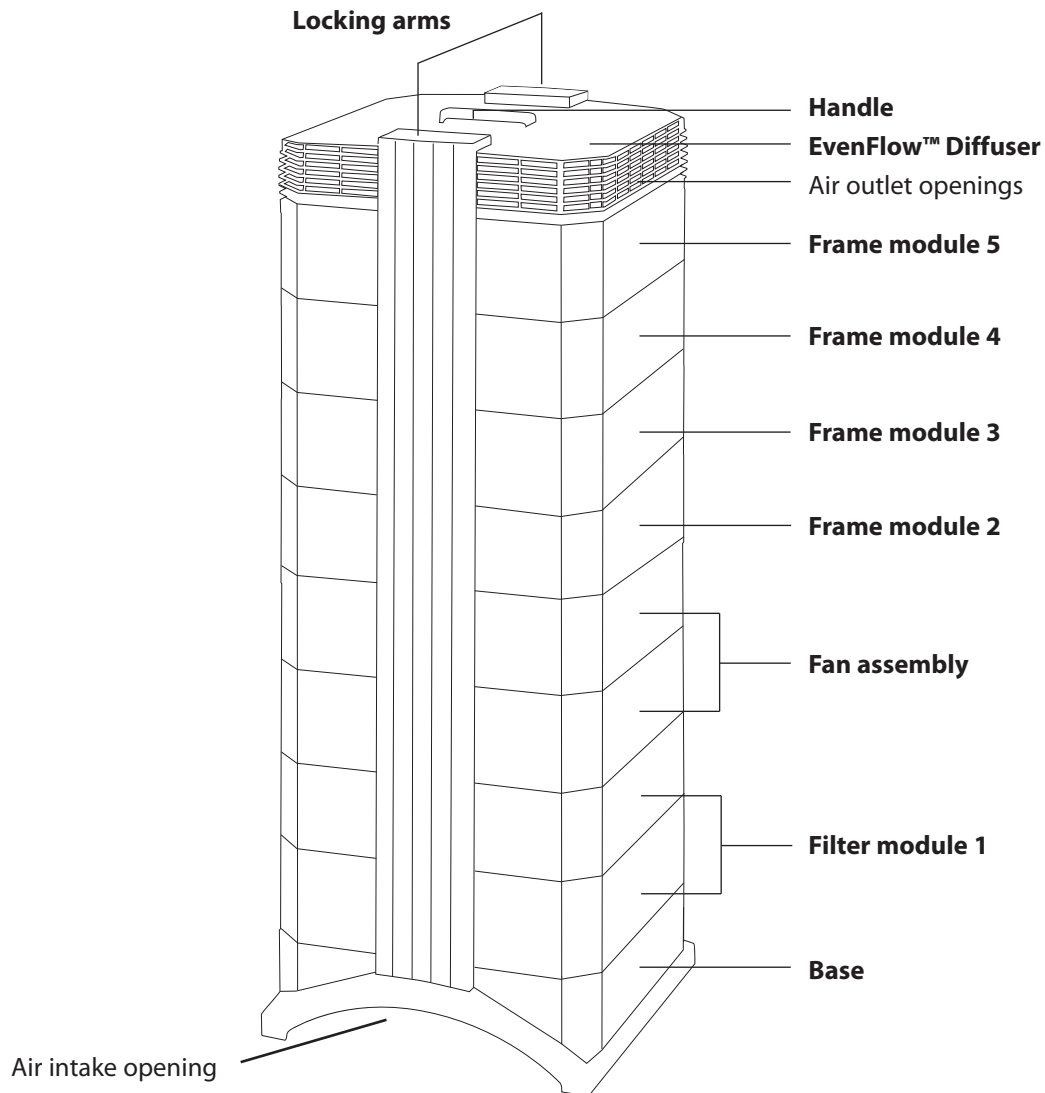


- The **Locking Arms** hold the housing elements together. When opened, the locking arms allow easy access to all filters.
- The **Handle** on top of the diffuser is designed for carrying the IQAir system.
- The **EvenFlow™ Diffuser** features an omni-directional horizontal air outlet.
- **Frame 3 to 5** surrounds the 4 gas phase cartridges and filter sleeves to where the diffuser starts.
- The **Filter Module 2** consists of frame 2 and a steel base plate in which the four gas phase filter cartridges are fixed by means of a bayonet locking system.
- The **Fan Assembly** comprises two housing modules with the centrifugal fan inside.
- The **Filter Module 1** consists of frame 1 and the particulate pre-filter which is secured inside the frame by several filter clamps.
- The **Base** with its arched design features air intake openings on two sides.

## 3.2 Description of Removable Components

The IQAir® system features a modular housing design which enables the easy replacement of all filter elements in a matter of seconds. The illustration below shows all the removable components. For more details on how to replace filters, please refer to Chapter 6 – Replacing Filters.

## 3.3 How the IQAir® System Works

- 1.** Room air is drawn into the system via two arched openings at the base.
- 2.** The air is drawn in through a high-efficiency pre-filter that removes most pollution particles.
- 3.** At the heart of the system, sandwiched between the filters, is a powerful centrifugal fan which generates the airflow.
- 4.** The air is pushed through four steel cartridges that contain up to 31 lbs. of gas phase control media, which retains specific gaseous pollutants.
- 5.** Particulate post-filter sleeves hold back abrasion particles from the gas phase filter media.
- 6.** Low turbulence, low velocity air is returned to the room via the EvenFlow™ diffuser.

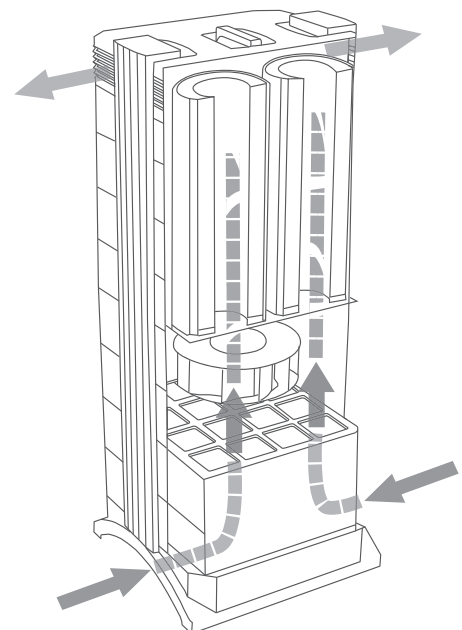


## Chapter 4 – Using the Control Panel

The IQAir® system is operated and controlled via the electronic control panel which is located at the top of the front locking arm.

Several operations can be completed via the electronic control panel:

- Switching the system on and off
- Controlling the fan speed and corresponding air delivery rate
- Checking the remaining filter life of the individual filters
- Setting the automatic timer
- Resetting the Filter Life Monitor after replacing a filter
- Locking the control panel to avoid tampering with the system's settings
- Choosing the desired display language
- Setting the day & time

### 4.1 Description of Control Panel

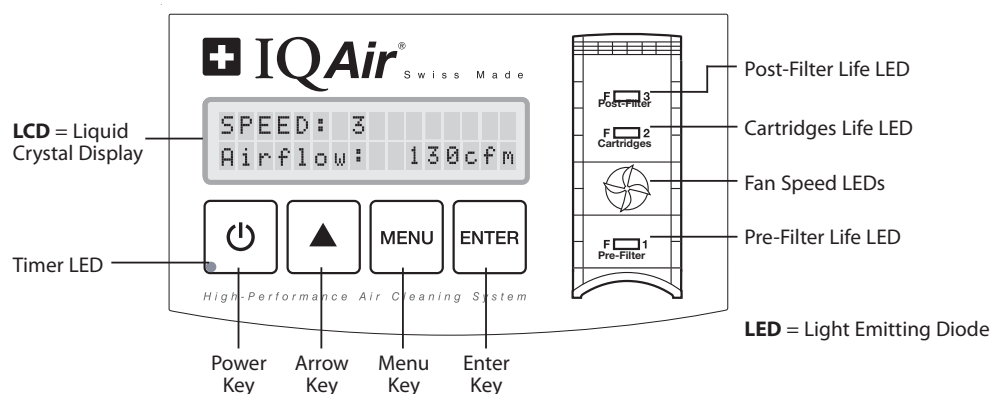

#### LCD Display

The 2-line LCD displays important information about the system's settings.

 
In standby mode, without the timer activated, the first line displays IQAir GCX and the second line displays Standby. If the timer is activated, the first line displays the day and time and the programmed start and stop times will be displayed on the second line.

If the IQAir® system is on, the first line displays the current speed setting and the second line displays the corresponding air delivery rate of the system; however, when the timer is activated the programmed start and stop times will be displayed on the second line.


By pressing the Menu key, ten active menu functions may be accessed. These functions are explained in detail in this chapter.



Main window: Standby mode



Main window: On mode

 

Menu window: Filter Life Monitor

#### 4.1.1 Description of Control Panel Keys



##### Power Key

The **Power** key switches the IQAir® system on and off. When the system is switched off, the fan stops to run, but the system will remain connected to the power supply (standby mode). The standby mode allows for automatic timer start-up. In the standby mode, the different menu functions can be accessed.

**Tip:** In a menu window, the **Power** key also serves as a quick exit key to return to the main display window.



##### Arrow (▲) Key

When the system is switched on, the ▲ key allows the adjustment of the fan speed. In the enter mode, indicated by the appearance of a black flashing cursor (see "Enter Key" below), the ▲ key is used to modify the selected setting in the display window. Confirmed with the **Enter** key, the enter mode is automatically terminated. The LCD will then display the current menu settings for another 15 seconds before reverting to the main window display.

### Menu Key

The **Menu** key allows access to any one of ten menus. Pressing the **Menu** key once allows access to the first menu function. Pressing the **Menu** key twice allows access to the second menu function, and so on. If no key is pressed for 15 seconds in a menu window, the display will revert to the main display window. **Tip:** If you are in a menu window and would like to remain in the window for more than 15 seconds, keep the ▲ key depressed.

### Enter Key

The **Enter** key, if pressed for 3 seconds, allows the modification of a setting. The enter mode is indicated by a flashing cursor on the modifiable setting. Pressing the **Enter** key again will save any entry and move the cursor to the next modifiable item in the display window. When the last modifiable choice in a window is confirmed with the **Enter** key, the enter mode is automatically terminated and the new settings are saved.

**Filter Life LEDs:** Whenever the system is on, the color of the filter life LEDs (light emitting diodes) indicates the state of the individual filters in the system. **Note:** The positions of the filter life LEDs on the control panel correspond to the actual positions of the filters within the system.


The filter life indicator LEDs signal four possible stages in the life of the filter:

- 1. Green:** The filter is still within 80% of its estimated life span.
- 2. Orange:** The filter is approaching the last 20% of its estimated life span.
- 3. Red:** The filter has reached the end of its estimated life span.
- 4. Red blinking:** The filter has passed its estimated life span and should be replaced immediately. The IQAir® system's effectiveness is likely to have been reduced dramatically, either due to a reduction in airflow (particle filters are clogged) or a reduction in filter efficiency (gas phase filter is saturated).

**Fan Speed LEDs:** These LEDs simulate the fan speed through the frequency of their rotation. The faster the rotation of the fan speed LEDs, the faster the actual fan speed of the unit.

## 4.2 Control Panel Locking Function

The control panel keys can be locked to avoid tampering with the settings. To lock or unlock the control panel keys, both the **Menu** and the **Enter** key have to be pressed down simultaneously for 3 seconds. The activated locking function is indicated with a star symbol in the control panel display.

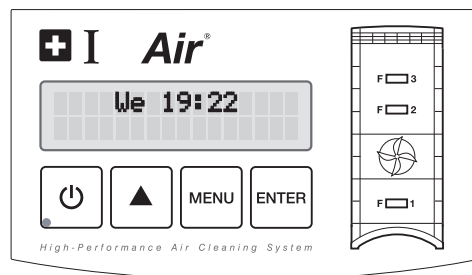

## 4.3 Fan Speed and Air Delivery

The IQAir® system can be set to run at six different fan speeds, which correspond to six different airflow rates. Speed 1 is the lowest speed. Speed 6 the highest fan speed. The higher the fan speed, the more room air will be filtered by the system. The high fan speed settings provide additional air cleaning power to deal with situations of elevated pollution levels.

To allow better evaluation of the system's performance at different fan speeds, the standard display window shows not only the fan speed, but also the air delivery rate (airflow). The displayed airflow is factory preset and is not measured by the system itself. (When timer is activated, the display will change. Refer to section 4.4.6)

### 4.3.1 Regulating Fan Speed

- 1.** When the IQAir® system is switched off (standby mode), the first line of the LCD display shows the model name. To switch the system on, press the **Power** key on the far left of the control panel.
- 2.** The LCD now displays the fan speed and the corresponding airflow rate.  
**Note:** The system starts at the fan speed at which it was running when it was last used.
- 3.** To change the fan speed, press the ▲ key.

### 4.3.2 Air Exchange Rates in Differently Sized Rooms

Any air cleaner can only be effective if it filters a sufficient amount of air in an indoor environment. For general air cleaning purposes, the IQAir® system should be able to filter the room air volume at least twice every hour on the set fan speed to achieve a significant air quality improvement. If the intensity of the pollution source is high or a high degree of purification is needed, more air changes may become necessary. In order to achieve the desired number of air changes, more than one air cleaner may be required.

The number of air changes that are necessary to attain a certain level of indoor air quality will depend on a variety of factors, including:

- **Intensity of air pollution source:** The higher the rate at which air pollutants are produced or enter the indoor environment, the higher the air cleaning rate in the room needs to be.
- **Filtration efficiency for specific air pollutants:** The lower the filtration efficiency for certain pollutants, the more air changes are required to reduce these pollutants.
- **Desired improvement in air quality:** The higher the desired improvement in air quality, the more air changes are required.

The number of air changes per hour (ACH) produced by an IQAir® system in a specific environment are calculated as follows:

$$\frac{\text{hourly air delivery of the IQAir® system (cfm)} \times 60}{\text{air volume of the room (cu.ft.) (L} \times \text{W} \times \text{H)}} = \text{air changes per hour (ACH)}$$

**Note:** The air delivery rates of the IQAir® system at the various fan speeds settings are listed on the “Technical Specifications” sheet included at the back of this manual or at the IQAir website [www.iqair.com](http://www.iqair.com).

**Example calculation:** A room with the dimensions of 13 x 14 x 8.5 ft. has an air volume of 1,547 cu.ft. With an air delivery rate of 140 cfm, the room air volume will be circulated over 5.4 times per hour by the IQAir® system (140 cfm = 8,400 cu.ft/h; 8,400 cu.ft/h ÷ 1,547 cu.ft = 5.43 ACH).

## 4.4 Using the Menu Functions

The IQAir® control panel offers a choice of several menu options which allow access to the advanced features of the system. In total there are ten active menu functions. The functions can be accessed in standby or running mode.

### 4.4.1 Menu Overview

Pressing the **Menu** key accesses the menu functions in the following order:

**1. Filter Life Monitor (Remaining Life)**

Allows the viewing of the remaining filter life of the individual filters within the system.

**2. Setting the Timer ON period (Auto Timer)**

Allows to activate the timer and set the Timer ON period.

**3. Automatic Timer (Day-of-the-Week Timer)**

Allows to deactivate the Timer ON period on certain days of the week.

**4. Timer ON Speed Selection**


Allows to set the fan speed for the Timer ON period.

**5. Timer OFF Speed Selection**

Allows to set the fan speed outside the Timer ON period.

**6. Time & Day Setting**

Allows to set the current time and day setting.

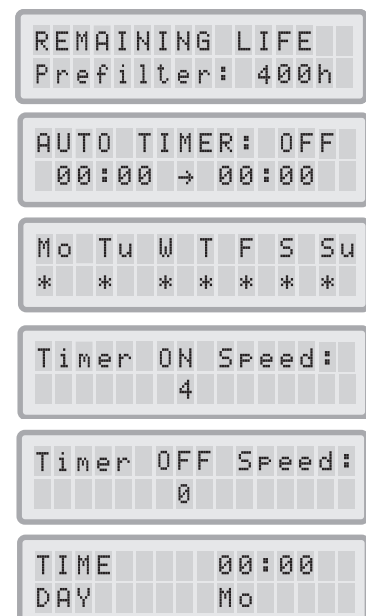

### 7. Filter Life Reset

Allows the resetting of the filter life counter after replacing a filter.

NEW FILTER

### 8. Airflow Units

Allows to switch the airflow units between cfm (cubic feet per minute) and m³/h (cubic meters per hour).

Airflow Units  
cfm

### 9. Language

Allows to switch the display language.

LANGUAGE  
English

### 10. Service Access

This menu is designed for factory access only.

Service Access

## 4.4.2 Filter Life Monitor (Remaining Life)

The IQAir® system is equipped with an electronic Filter Life Monitor that calculates the remaining life of the system's filter elements. Thanks to the Filter Life Monitor, the user does not have to guess when filters need to be replaced or replace them at fixed intervals (which rarely correspond to the actual amount of use). The Filter Life Monitor keeps track of the most important factors affecting the life of the individual filter elements. The Filter Life Monitor display shows the remaining life of each individual filter at any given time.

1. To reach the Filter Life Monitor display from the main display window, press the **Menu** key once. The remaining life of the Pre-Filter will appear.
2. Press the **▲** key to view the remaining life of the other filters in the system.
3. The remaining life of the filter elements is expressed in hours of operation at the current speed setting.

REMAINING LIFE  
Prefilter: 400h


REMAINING LIFE  
Cartridges 4000h

### How the Filter Life Monitor Works

The basis for the calculation of the remaining filter life is the already elapsed operation time at the set fan speed. This input is compared with an internal memory bank which contains information about the different filters' lives under specific conditions of use.

The Filter Life Monitor makes a calculation of the remaining filter life, taking into account not only past use of the system, but also likely future use. As reference for future use, the Filter Life Monitor uses the fan speed which is set at the time.

The relationship between the current fan speed and the remaining filter life displayed can be expressed as follows: The higher the current fan speed setting, the shorter the displayed remaining filter life.

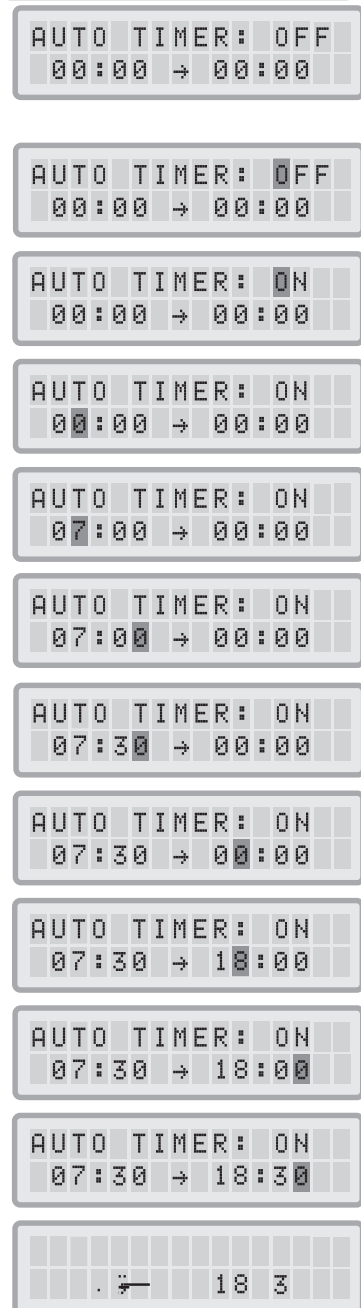


#### 4.4.4 Day-of-the-Week Timer

The Day-of-the-Week Timer allows the deactivation of the Timer ON period on certain days of the week. In its default setting the Timer ON period is enabled on all seven days of the week. This is indicated by stars below the abbreviations of the days. On days without a star the air cleaner will be running at the speed which is set in the Timer OFF Speed Selection Menu (see 4.4.5)

**Note:** At least one day of the week must be enabled with a star to be able to run the timer. If the timer is disabled on all days of the week, the timer status field in the Auto Timer Menu will switch to OFF and the timer will be disabled.


1. To reach the Day-of-the-Week Timer Menu from the main display window, press the **Menu** key three times.
2. Press and hold the **Enter** key until the cursor appears.
3. Press the **▲** key to activate (star) or deactivate (no star) the Timer ON period on a particular day. Press the **Enter** key to proceed to the next day.
4. Repeat the same procedure until the timer has been activated/deactivated on the desired days. The final **Enter** command exits the enter mode.

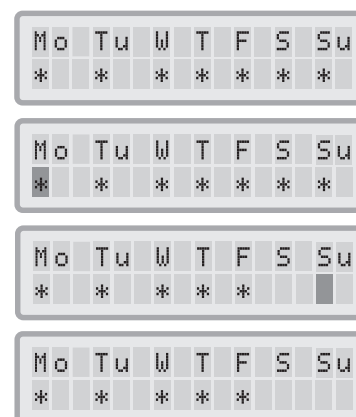

#### 4.4.5 Timer ON/OFF Fan Speed Selection Menu

The Timer ON/OFF Fan Speed Selection Menus allow the setting of two different fan speeds for two different time periods (referred to as Timer ON period and Timer OFF period). For the Timer ON period you can select fan speeds 1 to 6. For the Timer OFF period, you can select fan speeds 0 (OFF) to 6.

1. To reach the Timer ON Fan Speed Selection Menu from the main display window, press the **Menu** key four times.
2. Press and hold the **Enter** key until the black cursor appears.
3. Press the **▲** key to select the desired speed for the Timer ON period.
4. Press the **Enter** key to confirm the chosen speed and to exit the enter mode.
5. To set the Timer OFF period fan speed, press the **Menu** key one more time. Press and hold the **Enter** key until the black cursor appears and adjust the Timer OFF fan speed as above. The final **Enter** command saves the selection and exits the enter mode.

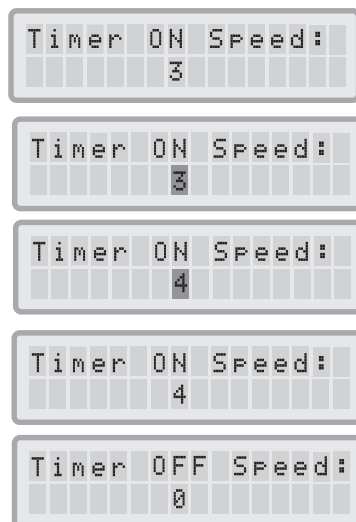

#### 4.4.6 Timer Information in the Control Panel

The IQAir® control panel shows the timer status without the need to access the Timer related menus.

##### Timer Deactivated

**System on Standby:** The first line shows the model name and the second line shows the word “Standby”. The Timer LED is red.

##### Display's Main Window

```
IQAir GCX
Standby
```

- System is on standby
- Timer is deactivated

##### Timer LED



red

**System Running:** The first line shows the fan speed and the second line shows the airflow. The Timer LED is off.

```
SPEED: 1
Airflow: 45cfm
```

- System is running
- Timer is deactivated



off

##### Timer Activated

**System on Standby:** The first line shows the current day and time and the second line shows the next time the system will turn on. The Timer LED is green.

##### Display's Main Window

```
We 19:22
Th 07:30 → 18:00
```

- System is on standby
- Timer activated

##### Timer LED



green


**System Running:** The first line shows the fan speed and the second line shows when the system will switch to the Timer OFF period. The Timer LED is green.

```
SPEED: 1
Th 07:30 → 18:00
```

- System is running
- Timer is activated



green

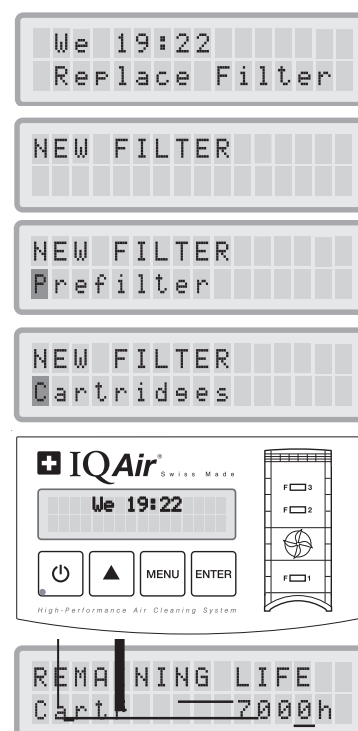

### 4.4.9 Changing the Airflow Units

1. To reach the air flow units menu from the main display window, press the menu key eight times. The current airflow unit is displayed.
2. You can change the air volume units which are displayed from cubic feet per minute (cfm) to cubic meters per hour (m<sup>3</sup>/h), or vice versa, by pressing the **Enter** key for three seconds either when the unit is switched on or in standby mode.
3. When the first character of the airflow units starts to flash, press the **▲** key once to change the units.
4. Press the **Enter** key to confirm the air volume unit change. Until modified again, the airflow rate will now be displayed in the newly selected units.  
**Note:** The air delivery (airflow units) displayed in this manual are examples only and will vary according to model.

```
Airflow Units
cfm
```

```
Airflow Units
cfm
```

```
Airflow Units
m3/h
```

```
Airflow Units
m3/h
```

### 4.4.10 Language Setting

The Language Menu allows you to change the IQAir® system's display language. The languages from which you can choose will depend on the model and the country of purchase.

1. To reach the Language Menu from the main display window, press the **Menu** key nine times. The current language is displayed.
2. To change the display language, press and hold the **Enter** key until the cursor starts to flash.
3. Use the **▲** key to scroll through the display language options.
4. Press the **Enter** key to save the desired display language and to exit the enter mode.

```
LANGUAGE
English
```

```
LANGUAGE
English
```

```
IDIOMA
Español
```

```
IDIOMA
Español
```


## Chapter 5 – Using the Remote Control

In addition to the control panel, the IQAir® system can be controlled by using the handheld remote control.

The remote control can be used to:

- Switch the system on and off
- Select the desired fan speed
- Activate and deactivate the timer function (Note: Start and stop times can only be set and changed directly on the system's control panel)

### 5.1 Remote Control Elements and Functions

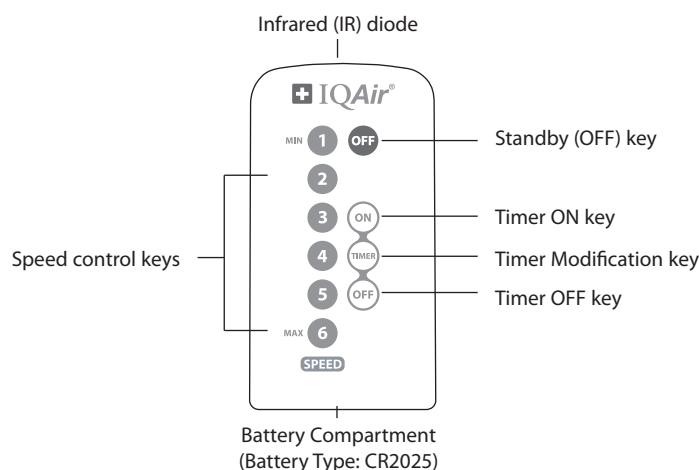

#### Switching the System On and Off


To switch the IQAir® system on with the remote control, press any one of the **speed control** keys marked with 1 through 6. To switch the IQAir® system off, press the **OFF** key.

#### Switching the Timer On and Off

If start and stop times have been set in the Daily Timer Menu, it is possible to switch the timer on and off with the remote control. To switch the timer on, press the **Timer Modification** key and then the **Timer ON** key. To switch the timer off, press the **Timer Modification** key and then the **Timer OFF** key.

### 5.2 Getting the Best Transmission Results


The IR (infrared) receiver of the IQAir® system is positioned underneath the control panel cover. In order to get the best signal transmission, the remote control should be pointed at the control panel when a remote command is being carried out. Alternatively, the remote control should be pointed at a surface like a wall, ceiling or window, from which the signal can bounce off in a right angle (90°) to the electronic control panel.

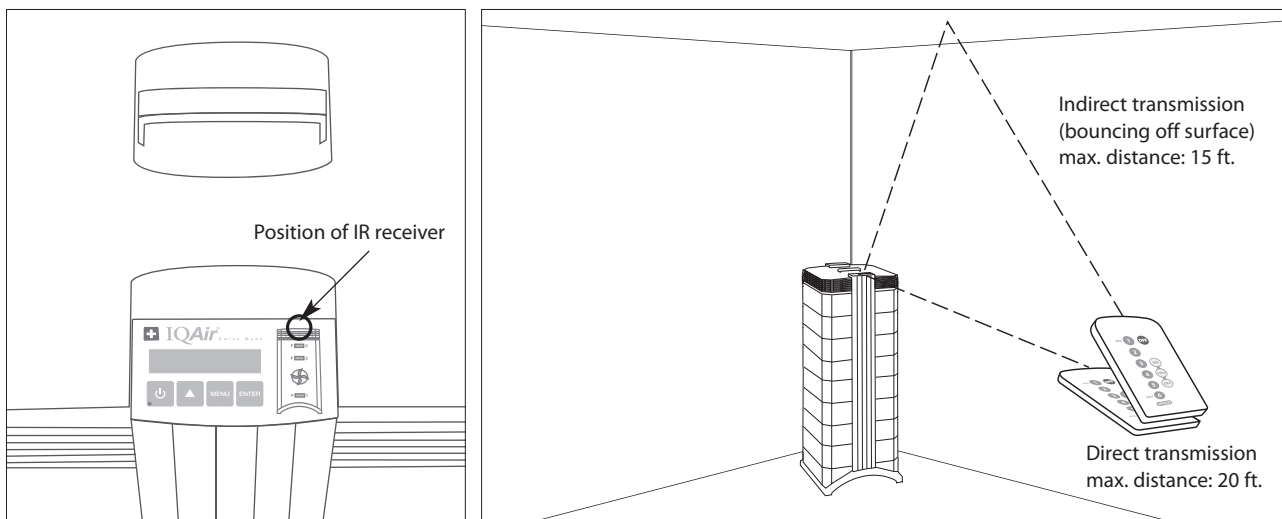

5.3 Replacing the Battery of the Remote Control

When the battery becomes weak, the transmission results will deteriorate and the battery should be replaced. The remote control requires one CR2025 battery. The battery compartment is located at the bottom end of the remote control.

To open the battery compartment, press the small lever to the side and slide the battery compartment out. Remove the used battery and insert the new battery.

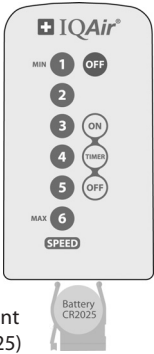

Battery Compartment  
(Battery Type: CR2025)

Chapter 6 – Replacing Filters

The IQAir® system is equipped with a Filter Life Monitor which is designed to assist you in determining when a filter needs to be replaced. If the air pollution in your environment is very high, there is a possibility that the filter may not be effective throughout the displayed life time and may have to be replaced earlier than indicated by the Filter Life Monitor.


For this reason, it is important to look out for the signs of used up filters and replace filters earlier if necessary. The main signs are:

- Increased operating noise
- Decreased airflow
- Clogged filters
- Increased odor presence

**Note:** Whenever a filter is replaced, the filter life must be reset for the new filter.  
Refer to section 4.4.8.

6.1 Location of the Filter Elements

The IQAir® system features a modular housing design which enables easy replacement of all filters in a matter of minutes. The illustration of the IQAir® system on the control panel shows the positions of the individual filters. These positions correspond to the actual positions of the filters within the system.

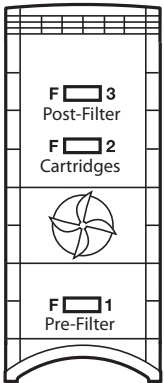

Filter Positions as shown  
on the Control Panel

6.2 Ordering Replacement Filters

To order replacement filters, please contact your local IQAir authorized dealer. To locate the dealer nearest to you, call 1-877-715-4-AIR (247) or visit [www.iqair.com](http://www.iqair.com).










Please order your replacement filters by quoting the appropriate article numbers stated below:





|                                |                              |                       |
|--------------------------------|------------------------------|-----------------------|
| <b>IQAir® GCX VOC:</b>         | Pre-Filter                   | Art. No. 102 14 11 00 |
|                                | VOC filter cartridge         | Art. No. 102 42 10 00 |
|                                | Post-Filter sleeve set       | Art. No. 102 50 50 00 |
| <b>IQAir® GCX MultiGas:</b>    | Pre-Filter                   | Art. No. 102 14 11 00 |
|                                | MultiGas filter cartridge    | Art. No. 102 42 16 00 |
|                                | Post-Filter sleeve set       | Art. No. 102 50 50 00 |
| <b>IQAir® GCX Chemisorber:</b> | Pre-Filter                   | Art. No. 102 14 11 00 |
|                                | Chemisorber filter cartridge | Art. No. 102 42 18 00 |
|                                | Post-Filter sleeve set       | Art. No. 102 50 50 00 |
| <b>IQAir® GCX AM:</b>          | Pre-Filter                   | Art. No. 102 14 11 00 |
|                                | AM filter cartridge          | Art. No. 102 42 14 00 |
|                                | Post-Filter sleeve set       | Art. No. 102 50 50 00 |

## 6.3 Opening and Closing the Housing

 The stacked housing elements are held together by two locking arms that latch into the diffuser. To open the system, follow the steps below.

1. Disconnect the IQAir® system from the power supply before attempting to open the system.
2. Press the first locking arm outward, using both thumbs as shown. Press just hard enough to release the arm from its snap-in position in the diffuser. Disengage the other arm in the same way.
3. Pull both locking arms evenly outwards until they snap into place and remain open. Access to all filter elements is now possible (to change a specific filter, refer to the appropriate section below).
4. To close the housing, simply push the locking arms inwards simultaneously until they snap back into the housing.

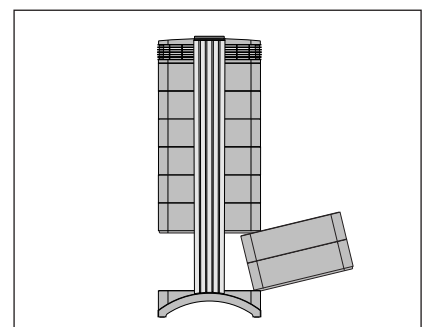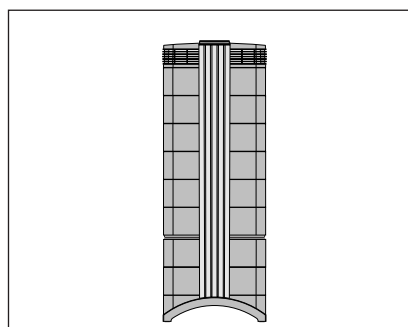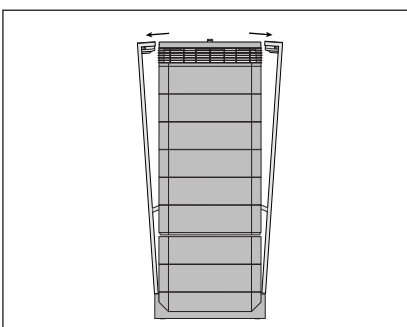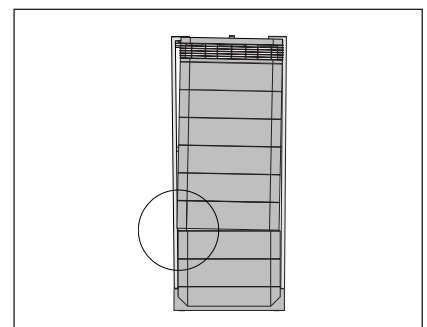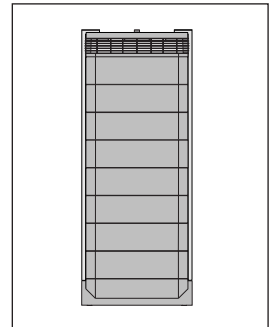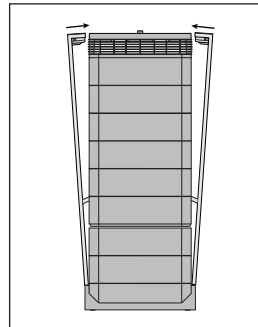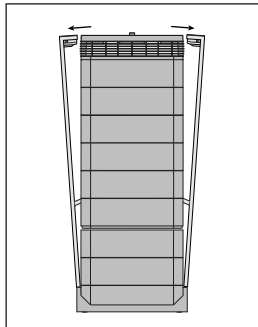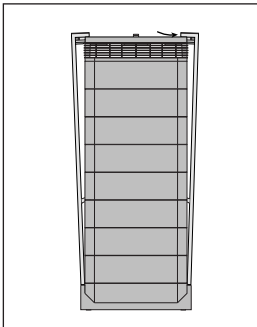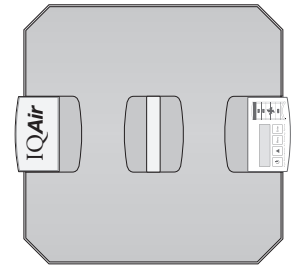

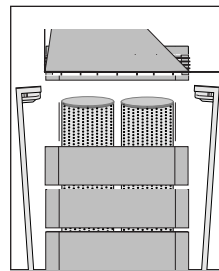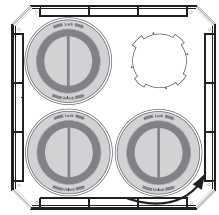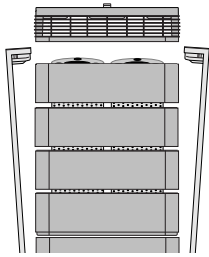

## 6.6 Discarding Used Filters

Used filter elements can normally be put into the regular household trash for disposal. If the system may have been exposed to potentially hazardous substances, the filters may have to be disposed of as hazardous waste. Please refer to local regulations and laws for proper disposal.

# Chapter 7 – Maintenance

## 7.1 Cleaning the Housing

- Unplug the IQAir® system before attempting to clean it.
- Use a soft and clean cloth for cleaning.
- For water soluble stains, use a window cleaning fluid.
- For the removal of tough, non-water soluble stains, use a silicon spray.
- Do **not** use any solvents or any organic cleaning fluids.

## 7.2 Maintenance-Free Fan

The IQAir® system is equipped with a maintenance-free fan motor.

## 7.3 Technical Support and Repairs

Should technical issues arise during or after the warranty period, please contact your point of purchase or call IQAir Technical Support at 888-560-1020 (toll free) or email: [support@iqair.com](mailto:support@iqair.com).

To expedite your service request, please have the following information ready when contacting us:

1. IQAir model, shell number and serial number (found at the base of the unit and on the certificate)
2. Your details (name, address, phone number, e-mail)
3. Point of purchase (name of dealer, city)
4. Date of purchase
5. Description of issue

Refer to the Technical Support and Warranty Registration card included with your air cleaner literature for more details.

## 7.4 IQAir Warranty

Your IQAir GCX system comes with a limited warranty of 1 year on parts and labor, excluding filters. Please complete and return the enclosed warranty registration card soon after purchase. The information will allow us to provide you with a swift service should service work become necessary.

Refer to the Warranty Information card included with your air cleaner literature for more details.

## Chapter 8 – Anti-Tampering Kit Instructions

Your IQAir® system comes with two anti-tampering features designed to prevent unauthorized tampering with the system:

- The arm-locking fixture prevents unauthorized access to the system's replacement filters.
- The power cord inlet fixture helps to prevent the unauthorized unplugging of the system. Note: Additional measures have to be taken to prevent unplugging of the air cleaner from the wall plug.


What's included in the anti-tampering kit:

- 1 x Torx 10 Safety Tool
- 1 x Torx 20 Safety Tool
- 2 x Torx 10 Safety Screws
- 4 x Torx 20 Safety Screws

The only additional tool you need to enable the anti-tampering features is a medium size flat head screw driver.




### How to install the power cable fixture

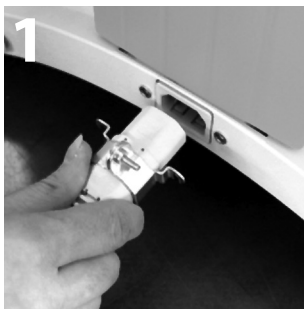

1) Make sure the power cord is unplugged. Plug the power cable into the air cleaner's power socket.



2) The metal clamp on the cable now lines up with two screw holes in the base of the air cleaner.

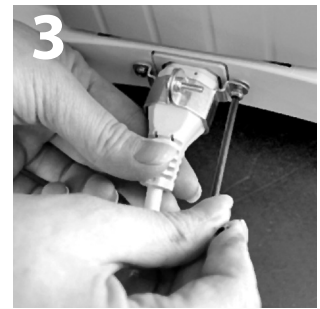


3) Insert two of the small screws supplied (Torx 10) and fix the metal clamp to the air cleaner, using the supplied tool.


### How to install the arm locking fixture



1) Disconnect the power cord. Press with the flat-head screwdriver into the small opening on the side of the arm with the IQAir logo face plate (not the control panel side).

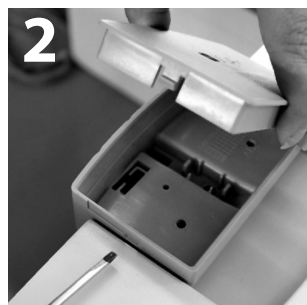

2) Lift out the face plate.

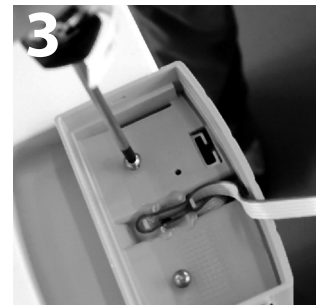

3) Use the larger screws and tool supplied. Insert the screws through the two holes and tighten.



4) Reinsert the face plate and press it in completely.

**Now the other side.**




5) Insert the flat-head screwdriver into the small opening on the side of the display control panel.



6) Lift out the control panel carefully. Do not lift more than 2-3 inches.



7) Disconnect the red connector of the ribbon cable from the control panel.

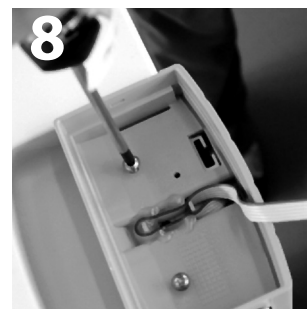

8) Insert two of the larger types of screws through the two holes and tighten, using the supplied tool.



9) Plug the red connector of the ribbon cable back into the control panel. Ensure that it is pushed in all the way.



10) Reinsert the control panel and press it in completely.









11) When you reconnect the air cleaner to a wall plug, the control panel should again display information. If not, you have not reconnected the control panel properly. Recheck steps 5-10.

Now you have secured the air cleaner, in order that it may not be opened by an unauthorized person. For filter replacement you will need to remove the four arm locking screws. (Refer to diagram 3 and 8).

## Chapter 9 – IQAir® Accessories (Optional)

**IQAir® advanced air cleaning systems can be complimented with a range of special IQAir® accessories. Ask your authorized IQAir® dealer for details.**

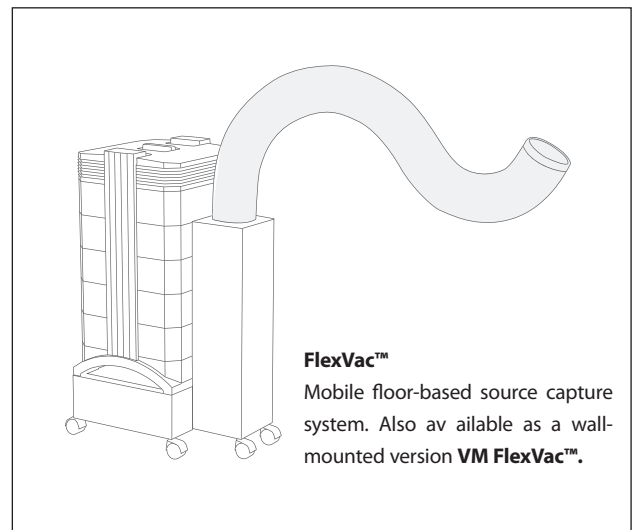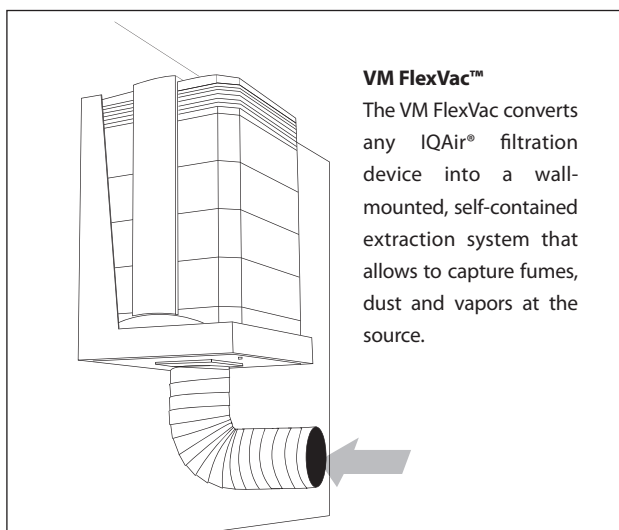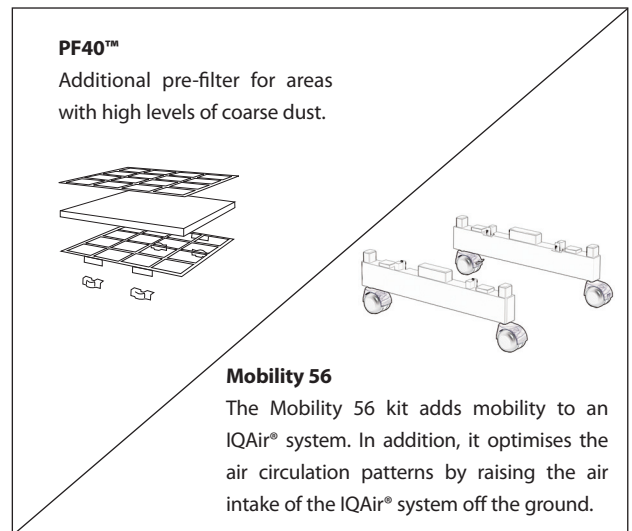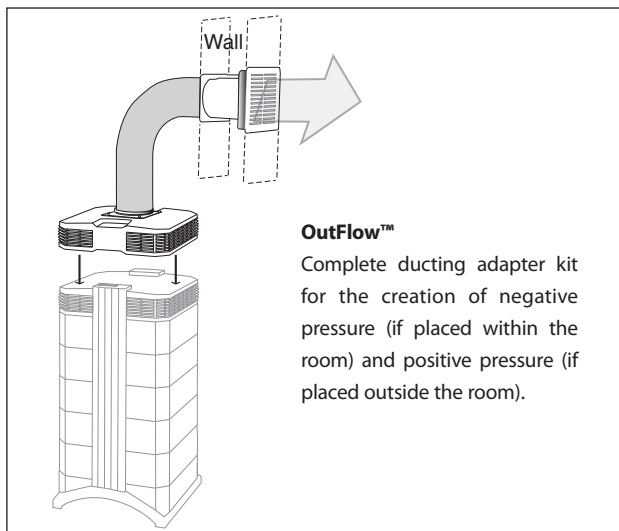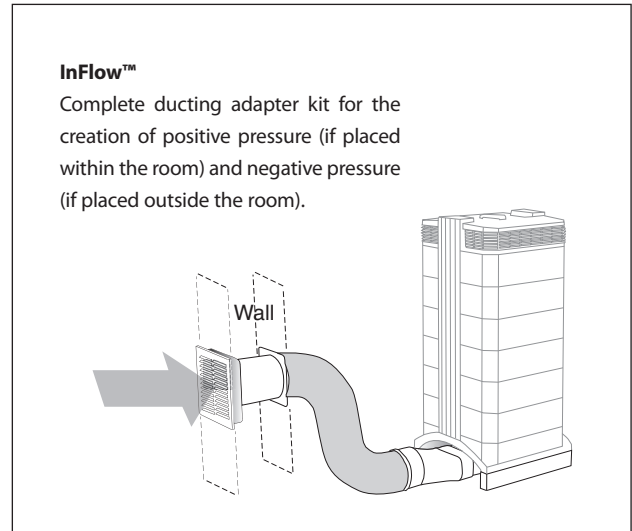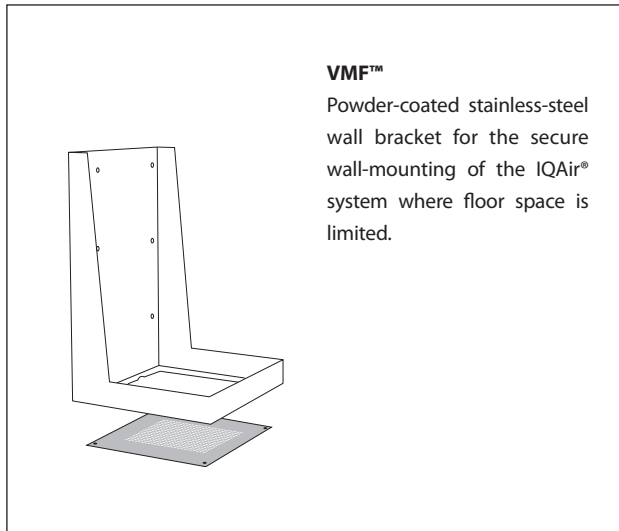

**Notes:**

---



