

 


Sefte[®] 36"

Smart Tower Fan

Sēf·tee: *"Quiet, gentle and undisturbed"; in Old English*

Instruction Manual

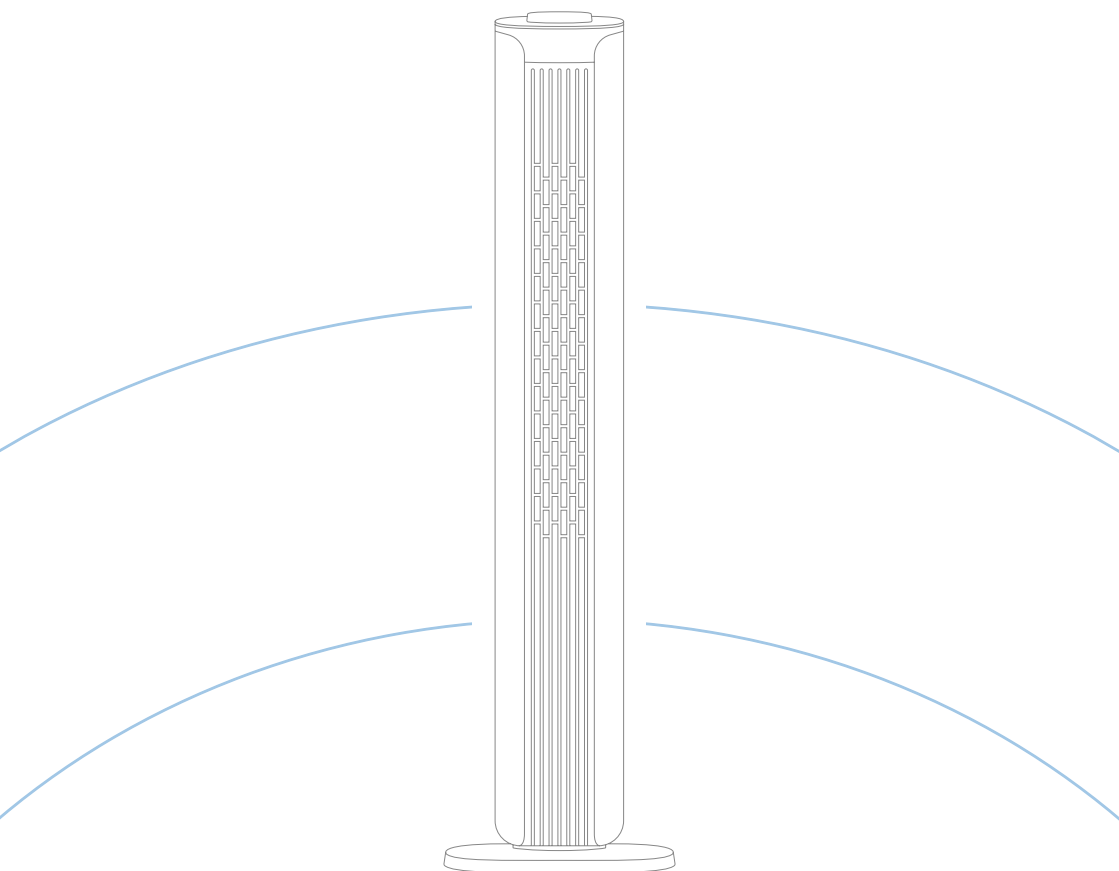

Thank you for choosing Meaco

Thank you for choosing Meaco, we really appreciate it. We built the Sefté® range of air circulators and tower fans after years of research and customer feedback, engineering the perfect cooling product for you and your family that not only provides you with enhanced cooling but is functional in its design and fits into your home.

This manual contains important information on the use and care of your tower fan. Please take some time to read this manual to take full advantage of your tower fans' many benefits and features.

Contents

Safety information 1

Register your Meaco warranty 4

Meaco App 5

What’s included 6

Product identification 7

Assembly 8

Operation 9

Remote Control 11

Maintenance 12

Storing13

Troubleshooting 13

Meaco customer care13

Specifications 14

Warranty terms & conditions 15

Safety information

Important safety instructions



This tower fan must not be used in rooms under the following conditions: potentially explosive atmosphere, aggressive atmospheres, featuring a high concentration of solvents or an extremely high ratio of dust.

Magnets: The remote control contains magnets. Please note the following: Pacemakers and defibrillators may be affected by magnets. If this affects you then please do not put the remote control in a pocket and warn anyone who is likely to use the tower fan or the remote that it has a magnet. Credit cards and data cards can also be affected by magnets and should not be placed near to the tower fan remote.

Button cell batteries: This product contains a button/coin cell battery in the remote control. Button batteries are hazardous and must be kept out of reach of children at all times. Swallowing a battery can cause serious internal injury within a short period and may be fatal. If you suspect that a battery has been swallowed or inserted into any part of the body, seek immediate medical attention. Ensure the battery compartment is always securely closed and do not use the remote control if it is damaged or does not close properly.

Keep children away: Do not allow children to play with or around this unit, which could result in injury. Be sure the unit is inaccessible to children when not attended. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Protect mains adaptor from damage: Never operate a unit with a damaged mains adaptor, as this may lead to electrical or fire hazards. If the mains adaptor is damaged, it must be replaced by a mains adaptor of the same type and amperage rating.

Extension cords: Extension cords must be grounded and able to deliver the appropriate voltages to the unit.

Handle with care: Do not drop, throw or crash the tower fan. Rough treatment can damage the components or wiring and create a hazardous condition.

Run on a stable surface: Always operate the tower fan on a stable, level surface, for example the floor or a strong counter, so that the tower fan cannot fall and cause injury.

Keep electrical components dry: Never allow water inside the tower fan's electrical components. If these areas become wet for any reason, thoroughly dry them before using the tower fan. If in doubt, do not use the tower fan and consult a qualified electrician or a Meaco approved engineer.

The operator must make the operating instruction available for the user and make sure that the user does understand the manual.

Instructions about the WEEE



Correct disposal of this product (Waste Electrical & Electronic Equipment)

This marking indicates that this product or accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Users should contact either the retailer where they purchased this product, or their local government, for details of where and how they can take these items for environmentally safe recycling.

Declaration of conformity

Hereby, Meaco declares that this radio equipment is in compliance with Directive 2014/35/EU and with the relevant statutory requirements. The full text of the EU declaration of conformity and the UK declaration of conformity is available at the following internet address:
<https://www.meaco.com/pages/compliance-data>.

PSTI

Hereby, Meaco declares that this product meets the following requirements of PSTI Schedule 1 or 2. The full PSTI Statement of compliance can be found here:
<https://www.meaco.com/pages/compliance-data>

We will maintain security updates for at least 6 years from the launch day of related products. For more information visit: <https://www.meaco.com/pages/privacy-policy>

Wiring instructions

Should it be necessary to change the plug, please note the wires in the mains lead are coloured in accordance with the following code:

Blue: Neutral

Brown: Live


Green and yellow: Earth

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

1. The **BLUE** wire is the **NEUTRAL** and must be connected to the terminal which is marked with the letter **N** or coloured **BLACK**.
2. The **BROWN** wire is the **LIVE** and must be connected to the terminal which is marked with the letter **L** or coloured **RED**.
3. The **GREEN/YELLOW** is the **EARTH** and must be connected to the terminal which is marked with the letter **E** or coloured **GREEN** or **GREEN/YELLOW**.
4. Always ensure that the cord grip is positioned and fastened correctly.
5. Only ever use the same fuse as fitted in the original product, if in doubt please contact Meaco first, or a qualified electrician.

Example wiring for a Standard British Plug:

Note – The Earth Terminal is marked with the letter E or Earth Symbol (⏏).

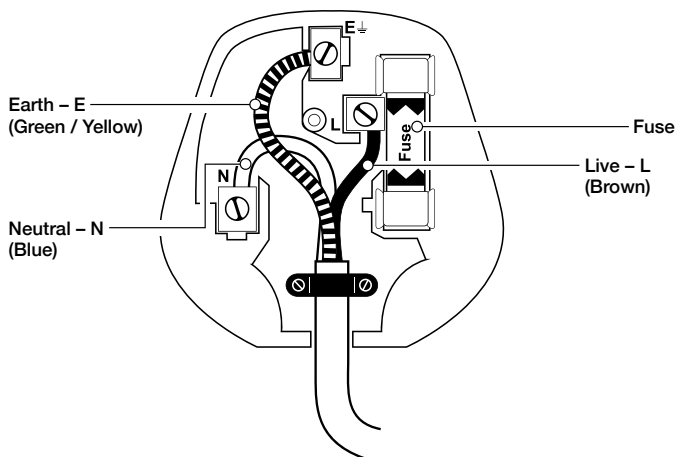


Register your Meaco warranty

Your Meaco tower fan comes with a free 3-year warranty, simply register your details online and you'll be covered for parts and labour for 3 years from the date of purchase, subject to the terms and condition of the warranty.

Where to find your tower fans serial number

The serial number can be found on the rating label on the back of the tower fan.

Remember to keep a copy of your purchase receipt safe, you will need to show this to our Customer Service team should you need to make a warranty claim.

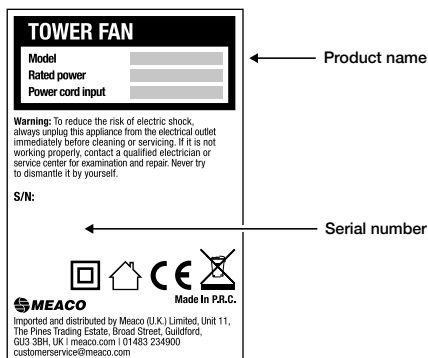

Ways to register your Meaco warranty



Register online

Visit our website to register your free 3-year warranty online:

<https://www.meaco.com/pages/register-your-warranty>

Register by phone

Call our Customer Service team to register your free 3-year warranty over the phone: 01483 234900

Opening times: Monday - Friday 9am - 5:30pm

Meaco App

Control your new tower fan with the Meaco app.



Scan the QR code to install the Meaco app or download the Meaco app from the App store or Google Play.


Open the app and follow the instructions to create a new account and pair your tower fan.

Connecting your tower fan to your Meaco app

1. Plug the tower fan into the mains via the mains adaptor and press the Standby ON button.
2. Hold the Mode button on the tower fan interface for 3 seconds.
3. The tower fan will beep and a Wi-Fi symbol will flash on the display.
4. In the Meaco app, press the + button in the top right hand corner and then 'Add device'.
5. The app will search for nearby devices and your tower fan will appear, click 'Add'.
6. Once the tower fan is successfully connected to Wi-Fi, the Wi-Fi symbol will stop flashing.

What's included


Carefully unpack the tower fan. Keep all packaging materials away from children. We recommend flat packing and keeping hold of the box should you need it in the future.

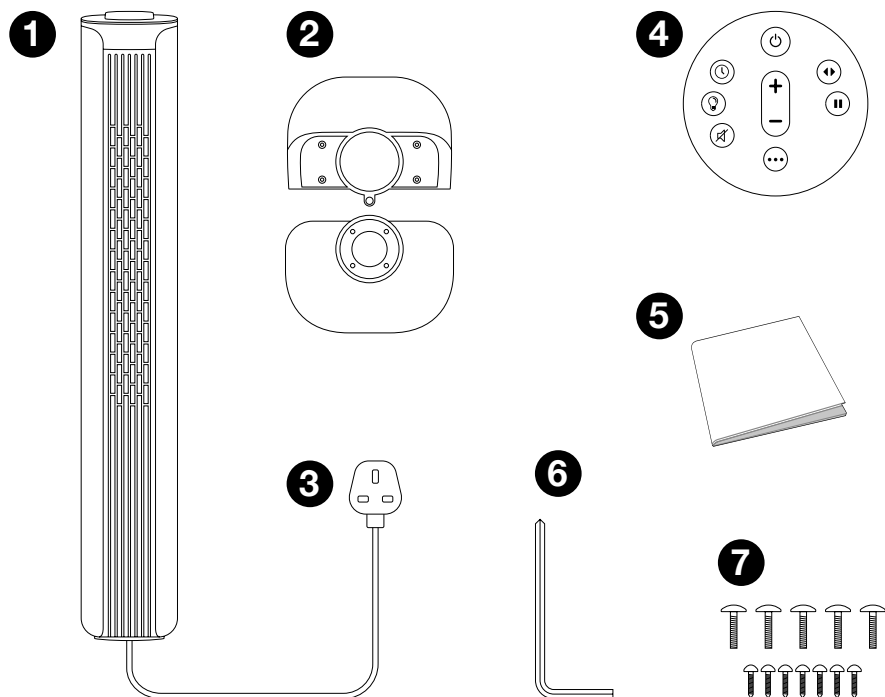

1. Sefto® Smart Tower Fan - 36 inch
2. Base (2 parts)
3. Power cord
4. Remote control

5. Instruction manual
6. Screwdriver
7. 5x large screws
7x small screws

Product identification

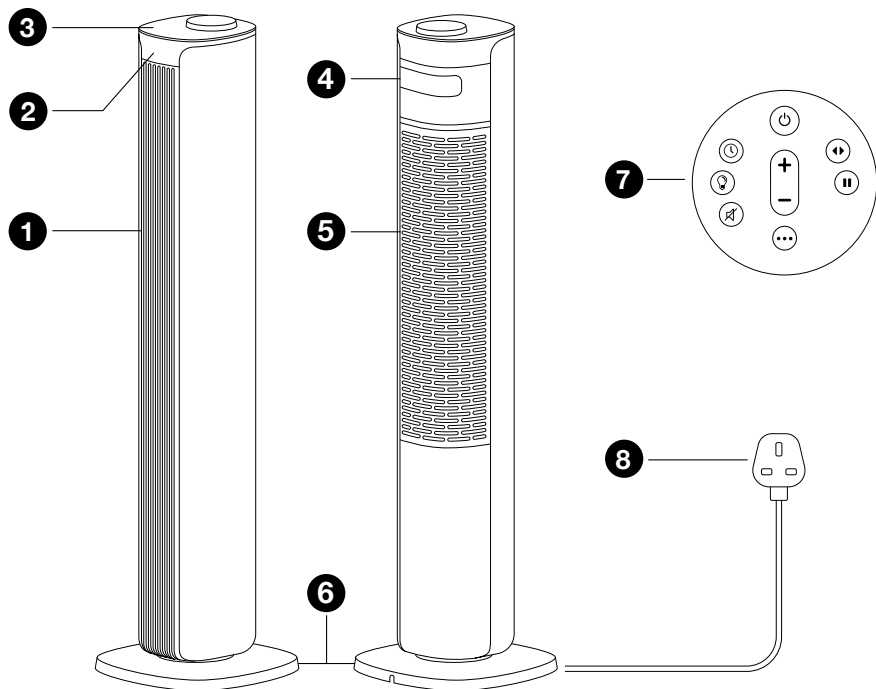


- 1. Front grille
- 2. Display
- 3. Interface
- 4. Handle


- 5. Back grille
- 6. Base
- 7. Remote control
- 8. Power cord

Assembly


Warning: Do not plug the tower fan in before assembling.

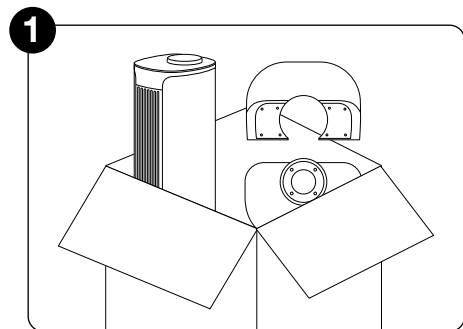


Remove the tower fan & its base from the box.

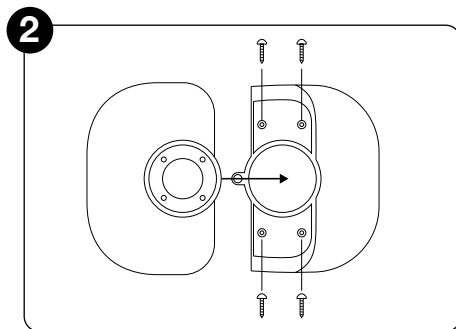

Secure the two parts of the base together using the 8 small screws.

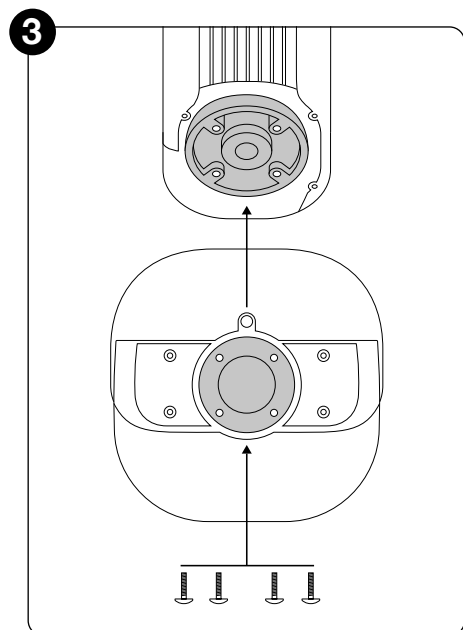

Locate the plastic nut from underneath the tower fan. Secure the base to the tower fan to the plastic nut using the 4 large screws.

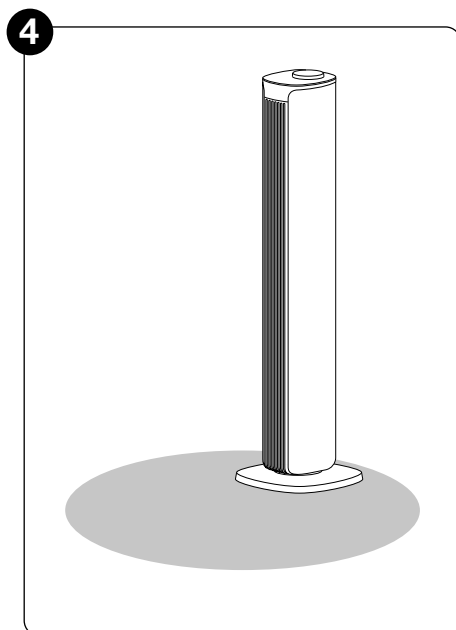


Place the tower fan on a flat, stable surface and allow at least 15 inches of clearance from the front of the tower fan. Plug in and enjoy!

Operation

When the tower fan is plugged into the mains, the tower fan will beep once and enter Standby mode.

Interface and Display

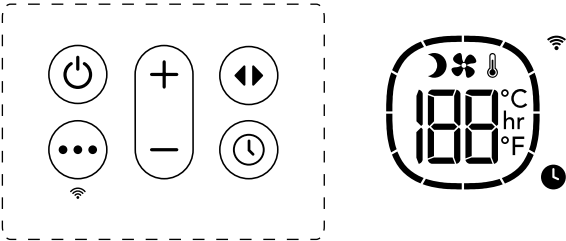

Standby ON/OFF: Press the standby button once to turn the tower fan on and press the standby button again to turn the tower fan off. To turn the tower fan power off, unplug it from the mains.

After a setting is adjusted, the interface will revert back to displaying the room temperature and the set mode (unless in Night mode where the interface will turn off).



Mode: Press the mode button to move through 3 modes: Normal, Night and ECO.

Normal

The tower fan will run as normal on the selected fan speed between 1 and 12.

Night

The interface will turn off and the buttons will no longer beep when pressed. The fan speed will reduce by 1 step every half an hour until it reaches fan speed 1. When changing a setting (e.g. the fan speed) the display will turn on briefly until set and then turn off again.

ECO

The fan speed will automatically change depending on the room temperature.

Room temperature	<19°C	20°C	21°C	22°C	23°C	24°C	25°C	26°C	27°C	28°C	29°C	>30°C
Fan speed	1	2	3	4	5	6	7	8	9	10	11	12



Increase fan speed: Press the + fan speed button to increase the fan speed between 1 and 12. When 12 is reached, pressing this button again will take you back to 1.



Decrease fan speed: Press the - fan speed button to decrease the fan speed between 1 and 12. When 1 is reached, pressing this button again will take you back to 12.



Air Beam Precision: There are 4 angles of horizontal oscillation. Press the horizontal oscillation button to move through narrow (1), medium (2), wide (3) and 180° (4) oscillation. Once selected, the display will revert back to displaying the room temperature. To turn off horizontal oscillation, press the horizontal oscillation button until 0 appears on the display.

Oscillation type	Display	Degree of horizontal oscillation
Narrow	1	45°
Medium	2	90°
Wide	3	135°
180°	4	180°




Timer: Use the timer button to set an ON or OFF timer. To remove either the ON or OFF timer, press the timer button until you reach '00 hrs'.

Timer on When the tower fan is in standby mode, use the timer button to move between 1 and 12 hours in which the tower fan will turn on. Once the desired number of hours has been reached on the display, the tower fan will beep twice. The interface will display the number of hours in which the tower fan will turn on e.g. '03 hr'.

Timer off When the tower fan is on, use the timer button to move between 1 and 12 hours in which the tower fan will turn off. Once the desired number of hours has been reached on the display, the tower fan will beep twice (unless it is in Night mode). The interface will display a timer symbol under the room temperature. If in Night mode, the interface will turn off.

Remote Control

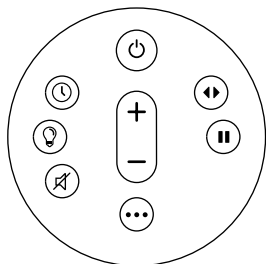

- Before using the remote control, remove the plastic tab.
- The remote control is magnetic and can be attached to the top of the tower fan - make sure the buttons are facing inwards.
- The remote control has a range of approximately 4 metres.

The following functions are only available via the remote control or the Meaco app.



Light: Press the light button to turn off the display. Press again to turn back on.



Mute: Press the mute button to silence the buttons on the tower fan. The tower fan will beep when the mute button is pressed and then will no longer beep when any other buttons are pressed. Press the mute button again to unmute.

Hold the mute button down for more than 5 seconds to change the temperature on the display between °C and °F.




Pause: Press the button to pause the oscillation at any point, both the vertical and horizontal oscillation will pause.


Replacing the remote control battery

If the remote control fails to work within 4 metres of the tower fan, replace the battery. Battery type: CR2025 or CR2032. To replace the battery follow the steps below:


Keep batteries away from children!

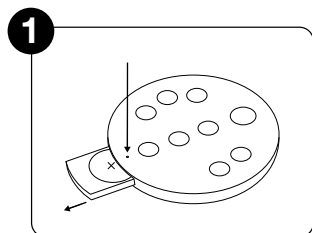

Push the safety release (below the Mode button) with the end of a paper clip to release the battery compartment.

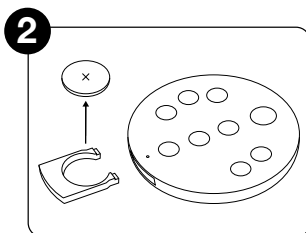

Replace the battery making sure the polarity is correct.

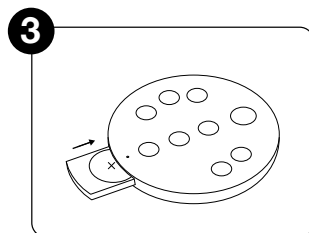

Push the battery and battery compartment back into the remote control.


Maintenance

Cleaning your tower fan


To ensure your tower fan is always performing at its best, it's important to regularly clean it.

- Always unplug your tower fan from the mains before cleaning.
- Do not allow the tower fan to get wet.


Use a soft dry cloth to clean the external and internal parts of the tower fan. To access the fan blades, following the steps below:

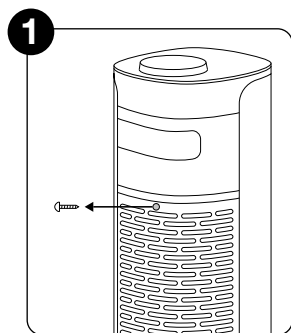


Using a screwdriver, unscrew the screw at the top of the back grille and remove the grille.

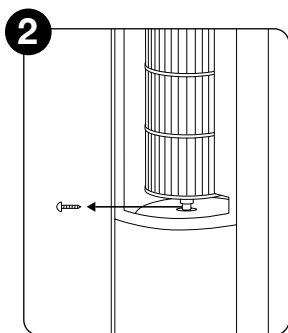


Locate the screw at the bottom of the fan blade and unscrew.

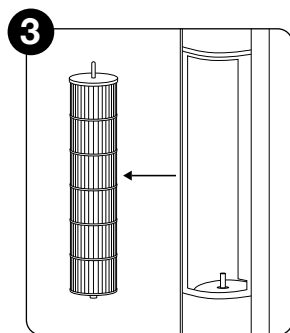


Remove the fan blade from the inside of the tower fan.

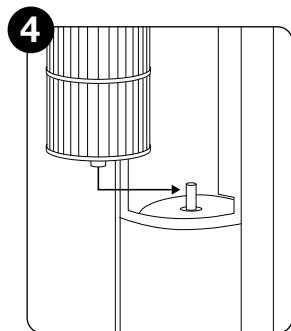

Once cleaned, put the fan blade inside the tower fan by aligning the hole on the bottom of the fan blade with the motor shaft.

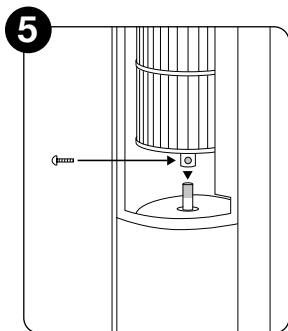

Make sure the screw hole and flat surface of the motor shaft face upwards and secure with the screw.

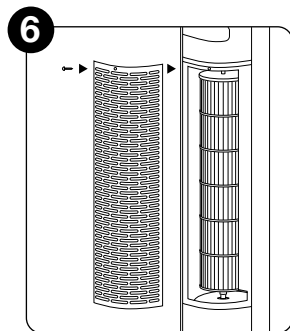

Put the back grille back onto the tower fan and secure it with the screw.

Storing

Store the tower fan in a clean, dry place in its original box.

Tip! The tower fan can also be used in winter to help distribute warm air more effectively within a room or it can be used in conjunction with a dehumidifier to circulate dry air and dry your laundry faster.

Troubleshooting

If you come across a problem with your tower fan, check the table below and try the suggestions. If the problem persists, contact Meaco.

Error	Action
Fan blades not moving	Check the power is connected correctly
Increased noise level	Clean the fan blades Make sure the locking cap is tightened securely
E1	Contact Meaco
E2	Contact Meaco

Meaco customer care

If you have a question about your Meaco tower fan, contact our Customer Service team who will be happy to help. Make sure you have your serial number and details of where and when you purchased your tower fan.

Meaco contact details

Website: meaco.com

Email: customerservice@meaco.com

Phone: 01483 234900

Address: Meaco, Unit 11, The Pines, Broad Street, Guildford, Surrey, GU3 3BH, United Kingdom

Specifications

If you have a question about your Meaco tower fan, contact our Customer Service team who will be happy to help. Make sure you have your serial number and details of where and when you purchased your tower fan. Information to identify the model(s) to which the information relates to Meaco Seft® Smart Tower Fan.

Description	Symbol	Value	Unit
Maximum fan flow rate	F	[34.41]	m³/min
Fan power input	P	[34]	W
Service value	SV	[1.01]	(m³/min)/W
Standby power consumption	PSB4	[<1]	W
Fan sound power level	LWA	[20]	dB(A)
Maximum air velocity	c	[9.0]	m/s
Noise level	LWA	[20]	dB(A)
Voltage	-	[220-240]	V
Power consumption	-	[3.5-34]	W
Dimensions (HWD)	-	[925x263x260]	mm
Nett weight	-	[4.1]	kg
Measurement standard for service value	Veordnung (EU) Nr. 206/2012 + (EU) Nr. 2016/2282 EN IEC 60879:2019 EN 50564:2011 EN 60704-1:2010 + A11:2012 EN IEC 60704-2-7:2020		

Contact details for obtaining more information

Website: <https://meaco.com/pages/contact-us>
 E-Mail: customerservice@meaco.com
 Telephone: 01483 234900
 Address: Unit 11, The Pines Trading Estate, Broad Street,
 Guildford, GU3 3BH, United Kingdom


Warranty terms and conditions

There is a three-year manufacturer's warranty on your tower fan from the date of delivery. Within the three-year warranty all manufacturing defects will be repaired free of charge.

The following applies:

1. Any repair or replacement of your tower fan or its components during the warranty period will not result in an extension of the warranty period.
2. If your tower fan has been opened or tampered with or not genuine components have been fitted by yourself or anyone other than a Meaco engineer, your warranty is invalid. This does not include removing the tower fan grille to clean the fan blades.
3. Components subject to normal wear and tear, the Li-ion battery, remote control and mains adaptor are not covered by the warranty.
4. The warranty is only valid on presentation of the original, unaltered and date-stamped purchase receipt. If you are unable to produce proof of purchase, the warranty on your tower fan is invalid.
5. The warranty does not cover damage caused by actions that deviate from those as described in the instruction manual or by neglect.
6. The warranty does not cover faults caused by dirt or by third-party products.
7. Using a third-party switching device that turns the tower fan on or off via the mains will invalidate the warranty.
8. The warranty does not cover accidental damage.
9. All claims for compensation, including consequential damage, will not be entertained.

For the full list of the warranty terms and conditions please visit: www.meaco.com/warranty-terms.

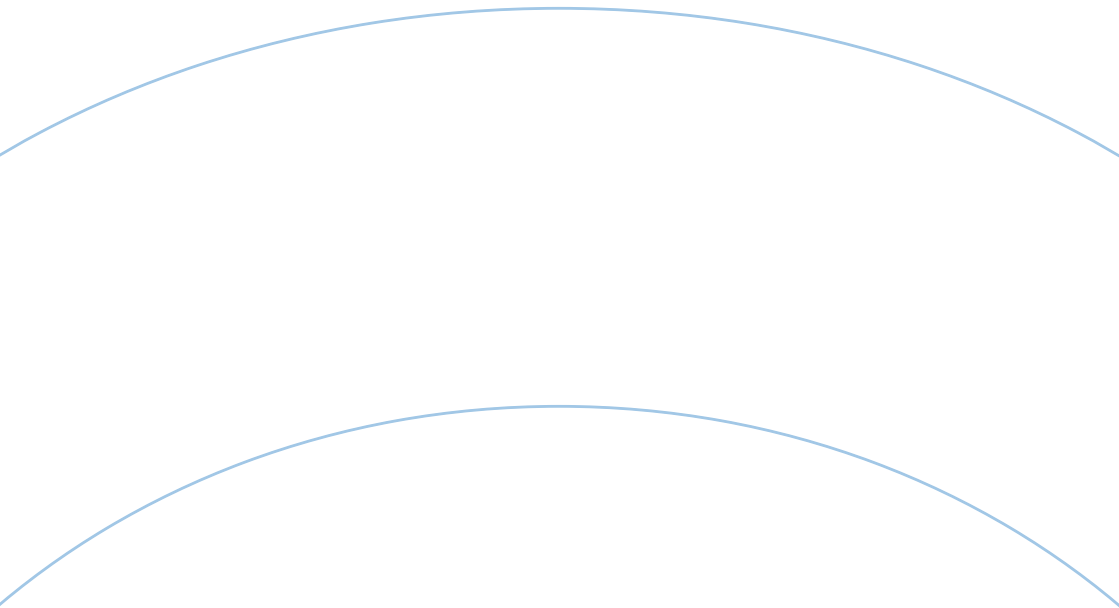

Unit 11, The Pines Trading Estate, Broad Street,
Guildford, GU3 3BH, United Kingdom

meaco.com



The mark of
responsible forestry