


ProBreeze® **AirFlo^{mini™}**

Instruction Manual

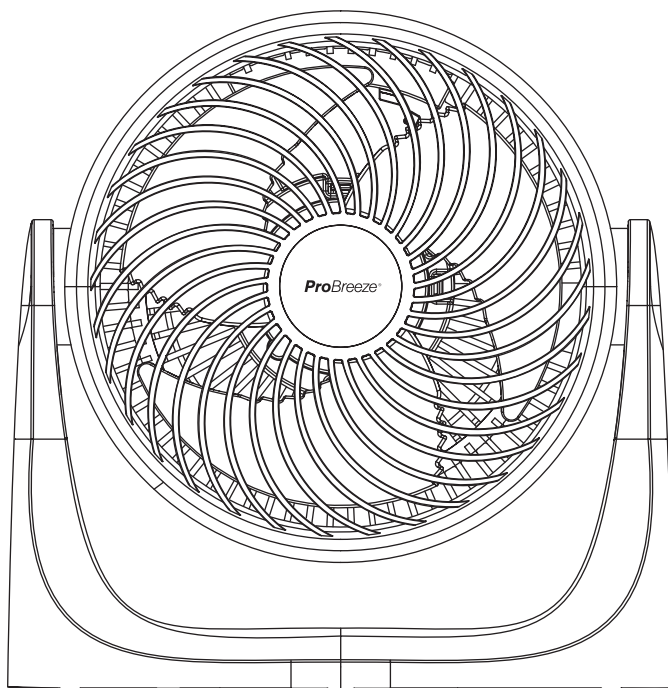

Model PB-F-28

Turbo Fan

IMPORTANT INSTRUCTIONS
– RETAIN FOR FUTURE USE

CONTENTS

EN	Safety Instructions.....	Page 3
	Specifications.....	Page 6
	Symbols Explained.....	Page 6
	Parts	Page 7
	Control Panel Explained	Page 7
	Cleaning and Storage.....	Page 8
	Recycling and Disposal.....	Page 9

ProBreeze® | AIRFLO MINI TURBO FAN MODEL PB-F-28

Thank you for choosing to purchase a product from Pro Breeze. Please read the entire manual carefully prior to first use and keep in a safe place for future reference.

SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons including the following:

 **WARNING: TO AVOID THE RISK OF ELECTRIC SHOCK, FIRE OR INJURY, ALWAYS ENSURE THE FAN IS UNPLUGGED FROM THE MAINS SOCKET BEFORE MOVING, CLEANING, ASSEMBLING OR SERVICING IT.**

 **WARNING: DO NOT ALLOW ANY LIQUID TO ENTER THE FAN. THIS COULD CAUSE ELECTRIC SHOCK OR FIRE.**

 **WARNING: SERVICING SHOULD ONLY BE CARRIED OUT BY THE MANUFACTURER, ITS SERVICE AGENT OR A QUALIFIED TECHNICIAN.**

- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to person.
- Ensure the mains supply (including voltage, frequency and power) complies with the rating label of the fan.
- Always plug the fan directly into a suitable wall socket. Do not connect it to an extension lead, multi-socket adaptor or similar device, as this may cause overheating and present a risk of fire.
- To avoid a circuit overload when using this fan, do not operate another high-wattage appliance on the same electrical circuit.
- Do not operate the fan with wet hands.
- Do not operate the fan if there are signs of damage to the fan, the power cord or any accessories supplied. If the supply cord is damaged, it must not be replaced by the user. To avoid the risk of electric shock or fire, it

must be replaced by the manufacturer, its service agent or a similarly qualified person.

- Do not pull on the power cord. Never move, carry or hang the fan by the power cord.
- Do not kink or wrap the power cord around the fan, as this may cause the insulation to weaken or split, particularly where it enters the fan.
- Avoid placing the power cord where it can become a tripping hazard. Do not place the cord under carpets or cover with rugs, runners or similar. Keep the power cord away from hot surfaces.
- The mains cable should not hang down from the surface on which the fan is placed, to prevent it from being pulled down.
- The fan must have a minimum 50 cm clearance around all sides. Ensure curtains or other objects are not drawn into the fan during operation.
- Do not cover the fan whilst in use.
- Ensure air inlets and outlets are not blocked during operation to prevent overheating.
- Do not operate the fan with any safety guards removed.
- Never touch the fan blades during use. Ensure the fan is switched off and the blades have completely stopped before handling.
- Do not use the fan to dry clothes.
- Never place anything on top of the fan.
- Place the fan on a flat, stable and dry surface, and always keep it upright. Operating in any other position could cause a hazard.
- Never leave the fan unattended while in use. Always turn it off and disconnect from the power supply when not in use.
- Do not use the fan with an external programmer, timer switch or any other device which would switch the fan on automatically, unless this function has already been built into the fan by the manufacturer.
- Keep the fan out of reach of children and pets.
- Do not leave children alone or unattended in the area where the fan is in use.
- Children shall not play with the fan.
- Cleaning and user maintenance shall not be made by children without supervision.
- This fan can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the fan in a safe way and understand the hazards involved.
- The fan is intended for indoor household use and similar applications. Do not use outdoors.

- Do not use the fan in high humidity or steam-filled rooms.
- Do not use the fan near water or in the immediate surroundings of a bath, shower or swimming pool.
- Never place the fan where it may fall into a bathtub or other water container.
- Do not use the fan near petrol, paints, flammable gases, ovens or other heat sources.
- Do not use the fan while sleeping or leave it operating unattended in sleeping environments, unless the fan is specifically equipped with a timer, sleep mode or automatic shut-off function.
- Always unplug the fan before cleaning or carrying out maintenance.
- Do not immerse any part of the fan, cord or plug in water or other liquids.
- Clean only with a soft, dry cloth. Avoid abrasive or solvent cleaners.
- Do not attempt to repair or adjust any electrical or mechanical elements in the fan. Doing so may be unsafe and will void your warranty.
- Ensure that the fan is switched off from the supply mains before removing the guard.

SPECIFICATIONS


Model:	PB-F-28W-UK, PB-F-28B-UK, PB-F-28WB-UK, PB-F-28WG-UK		
Frequency:	50-60 Hz	Power:	28 W
Voltage:	220-240 V~	Net Weight:	1.28 kg
Product Dimensions (LxWxH):	275 x 175 x 278 mm		

SYMBOLS EXPLAINED

	For indoor use only. Do not expose the appliance to rain or moisture.		Read the instruction manual before use. Retain these instructions for future reference.
	UKCA Mark – Shows that the product meets UK safety, health, and environmental protection requirements and has undergone the required conformity assessment procedures.		CE Mark – Confirms that the product meets EU safety, health, and environmental protection requirements and has been assessed before being placed on the market.
	Class II Equipment – Double or reinforced insulation. This appliance does not require a protective earth (ground) connection.		

PARTS

1. Front Guard
2. Base
3. Dial
4. Rear Guard

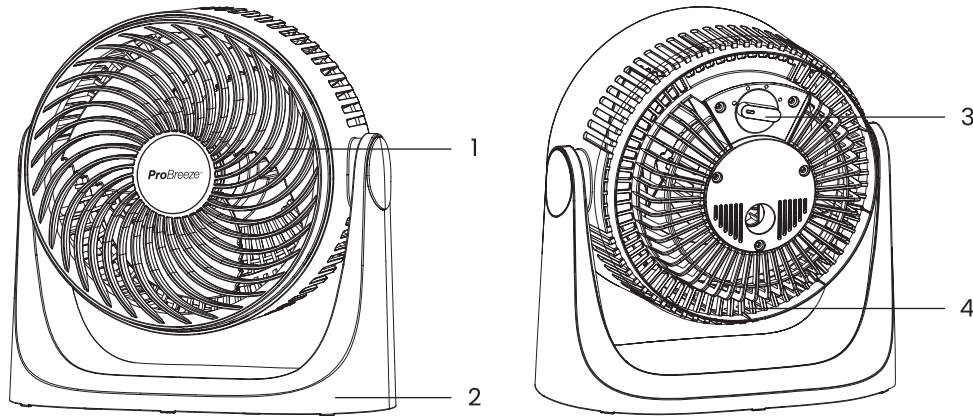

These images are for reference only, please refer to your product.

CONTROL PANEL EXPLAINED

Switching the Fan On and Off

Switching On

1. Plug the fan into a power socket.
2. Turn the control dial anti-clockwise to switch the fan on.


Switching Off

1. Turn the control dial clockwise until it reaches the "0" position.
2. The fan is now switched off.

Adjusting the Fan Speed

This fan has three speed settings:

- 1 = Low
- 2 = Medium
- 3 = High

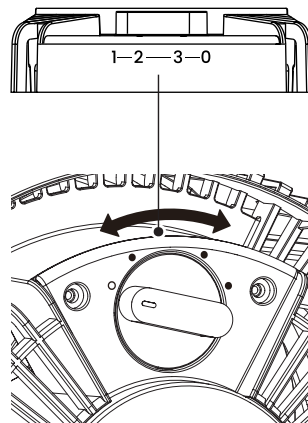

1. Switch the fan on.
2. Turn the control dial anti-clockwise to increase the fan speed, or clockwise to reduce it.

Adjusting the Fan Head

Hold the fan base steady and gently push the fan head backwards until it reaches your preferred angle.

Tip: The fan head will **click into place** as it moves. After **four clicks**, it has reached the maximum tilt position. Pushing it further could break your fan.

CLEANING AND STORAGE

WARNING: ALWAYS SWITCH OFF AND UNPLUG THE FAN BEFORE CLEANING, HANDLING, OR MOVING IT.

WARNING: DO NOT ALLOW WATER OR CLEANING LIQUIDS TO ENTER THE FAN, AS THIS MAY CAUSE ELECTRIC SHOCK OR FIRE.

- Do not use water jets, steam cleaners, or compressed air to clean the fan.
- Do not use abrasive cleaners or solvents, as these may damage the surfaces.
- Clean the fan only as described in this manual. Do not attempt any other cleaning methods.

Cleaning the Fan

- Ensure the fan is switched off and unplugged from the power supply.
- Wipe the exterior surfaces with a soft, slightly damp cloth.
- Use a vacuum cleaner with a brush attachment to gently remove dust from vents and air openings.
- Do not immerse the fan or any part of it in water or other liquids.
- Allow all parts to become completely dry before reconnecting the fan to the mains supply or storing it.

Storage

- Store the fan in a cool, clean, and dry location, away from heat sources, direct sunlight, or moisture.
- Avoid storage areas where the ambient temperature exceeds 40°C.
- Use the original packaging or a suitably sized box to protect the fan during storage.
- Ensure the storage area is well-ventilated and free from dust or sand to prevent damage.
- Do not wind the power cord tightly around the fan; doing so may damage the insulation.
- If the fan will not be used for an extended period, unplug it, clean it thoroughly, and store it safely out of reach of children.

RECYCLING AND DISPOSAL

Waste electrical and electronic equipment (WEEE) and packaging must not be disposed of with general household waste. Proper collection and recycling help prevent potential harm to the environment and human health and support the conservation of natural resources. Most products containing a plug, battery, or cable can be recycled. Please contact your local authority, recycling centre, or the retailer where the product was purchased for details on available collection and recycling schemes in your area.

	Waste Electrical and Electronic Equipment (WEEE)	This symbol on the product or packaging indicates that electrical and electronic equipment (EEE), as covered by Directive 2012/19/EU, must not be disposed of with general household waste. Instead, it should be taken to an appropriate collection point for the recycling of electrical and electronic equipment.
	The Mobius Loop	This symbol indicates that the product or its packaging is recyclable. Please dispose of it responsibly through appropriate recycling facilities.

Take-Back Scheme

Waste electrical and electronic equipment (WEEE) can be returned for responsible recycling and disposal when you purchase a new equivalent product, on a like-for-like basis, in accordance with the applicable UK WEEE Regulations and EU Directive 2012/19/EU. Products returned under this scheme are treated and recycled to minimise environmental impact and to recover valuable materials.

For more information on how to recycle this product, please visit www.probreeze.com or contact your local retailer or municipal collection service for details of available take-back and recycling facilities. Before returning or disposing of waste electrical products, the end-user is responsible for removing and separating any batteries or light bulbs. Waste batteries can also be deposited in collection bins available in most supermarkets and at local household waste recycling centres.



www.probreeze.com

One Retail Group, Ryland House,
24a Ryland Road, London, NW5 3EH, United Kingdom

EU Authorised Representative: One Retail Group EU Ltd.,
No. 1, Ent. A, St. Racho Dimchev 1, Sofia, 1000, Bulgaria
Compliance Contact: compliance-eu@oneretailgroup.com

© Copyright 2026