

SerenLife



SLACL5LWH portable air cooler

visit our website



SCAN ME
serenelifehome.com

user manual

PLEASE KEEP THIS MANUAL CAREFULLY FOR FUTURE REFERENCE. FOR HOUSEHOLD USE ONLY.

Features:

- Efficient & Powerful Cooling
- Portable Air Cooler
- 2-in-1 Evaporative Cooler & Fan
- Includes 4 Ice Boxes for Enhanced Cooling
- Dual Water Filling Ports (Top & Bottom) for Easy Refills
- Compact Freestanding Design
- 60-Degree Adjustable Oscillation for Wide Coverage
- Powered by a Highly Efficient Motor
- Low, Medium, and High Wind Speeds
- 5L Removable Water Tank
- Offers Personalized Comfort with Adjustable Settings
- Remote Control with Touch Panel and Display Panel (CR2025 battery not included)
- Designed for Durability and Daily Use
- Built-In Washable Dust Filter for Clean Airflow (Not HEPA)
- Simple Electric Plug-in Operation
- Adjustable Time, Temperature, and Fan Speed Settings
- Energy Efficient with Low Power Consumption
- Low Noise Level Motor
- Features Water Shortage Alarm
- Ideal for Outdoor Use

What's in the Box:

- Air Cooler
- Remote Control
- 4 Ice Boxes
- Base

CALIFORNIA PROP 65 WARNING

WARNING:

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

Technical Specs:

- Construction Materials: Plastic
- Filter Type: Washable Dust Filter (Not HEPA)
- Control Method: Remote Control and Touch Panel
- Color: White/Black
- Water Tank Capacity: 5L
- Rated Power: 80W
- Power Supply: 120V AC, 60Hz (US Plug)
- Maximum Timer Duration: 12 hours
- Amperes: 0.4 A
- Air Flow Strength: 1000 m³/h ≈ 588 CFM
- Operating Modes: Natural/ Normal / Sleep
- Water Consumption Per Hour: 0.163 Liters / Hour
- Operating Noise Level: 60dBA
- Fan Speed Settings: Three Levels, Low/Medium/High
- Recommended Ambient Range: 68 – 122 °F (20 – 50 °C)
- Remote Control Requires 1 × CR2025 Battery (not included)
- Power Cable Length: 5.5' ft.
- Mounting Type: Freestanding
- Item Weight: 11 lbs.
- Product Dimensions (L x W x H): 10.4" x 12.6" x 39.4" -inches

PLEASE MAKE SURE TO READ THIS MANUAL CAREFULLY BEFORE USE.


IMPORTANT INSTRUCTIONS:

1. To reduce the risk of fire or electric shock, do not use this product with any solid-state speed control device. Do not use in a window.
2. Do not soak the motor body in water or rinse it under the tap.
3. Use this fan only as described in this manual. Other uses may cause fire or electric shock.
4. To prevent electrical shock, do not place the fan in a window or immerse the plug or cord in water or spray liquids on it.
5. Unplug the fan when not in use, when moving it, and before cleaning.
6. After adding water, move the machine slowly. Do not tilt or collide.
Avoid placing it on sloped surfaces.
7. Do not place the unit near heat sources or in direct sunlight.
8. Do not expose the unit to high or very low temperatures. In hot weather, water in the tank may deteriorate and produce odor—refresh the water regularly.


9. Do not block the air inlet or outlet
10. Before packaging or storing, run the unit on fan mode for a while to fully dry the evaporator and prevent odors.
11. This unit provides strong humidification. Do not use in sealed spaces.
If used in a closed environment, turn off the cooling function.
12. Refill water when the level falls below the minimum water line.
13. Do not operate the fan near explosive or flammable fumes.
14. Avoid contact with moving fan parts.
15. To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord.
16. Use only on a dry surface.
17. Do not use the fan if the cord or plug is damaged. Discard or take it to an authorized service center.
18. Keep the cord away from traffic areas to prevent tripping.
19. This appliance should not be used by children or people with reduced physical, sensory, or mental abilities without supervision.
20. Supervise children when the appliance is in use. Do not let children play with it.
21. Do not leave the fan running unattended.

Note: Unplug the unit before removing the protective housing.

PRODUCT DIAGRAM

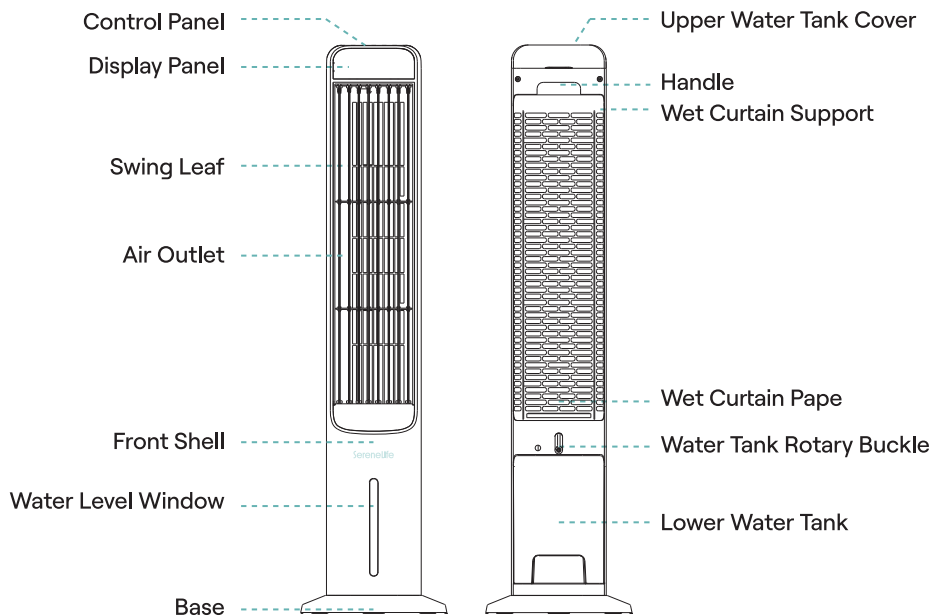

PACKAGE INCLUDES

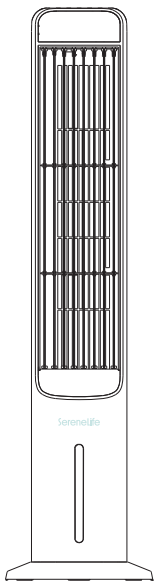

Portable Air Cooler



1X Remote Control



2X Large Ice Box



2X Small Ice Box




4X 4*18 Screws

BASE ASSEMBLY


Step 1:

Remove the left and right base pieces. First, cross-fasten the buckle, then rotate downward until both base sides are aligned and flat.

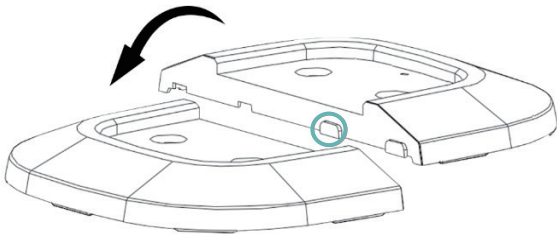


Step 2:

Align the positioning holes on the base with the columns on the cooler body, then secure and tighten the screws.

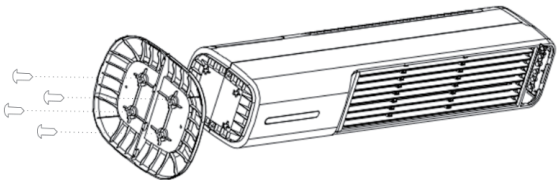


DISMANTLING AND INSTALLATION OF WATER TANK

Step 1: Turn the water tank lock from the vertical position to the horizontal position, then pull out the water tank.

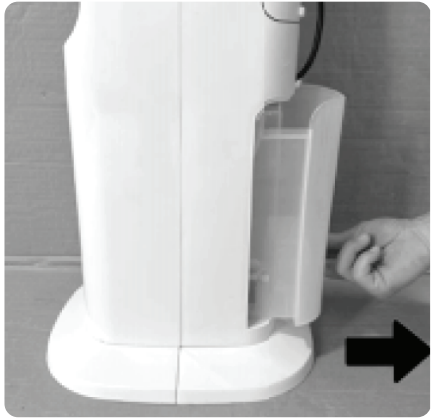


Step 2: Turn the two small knobs that secure the water pump, then remove the water pump.

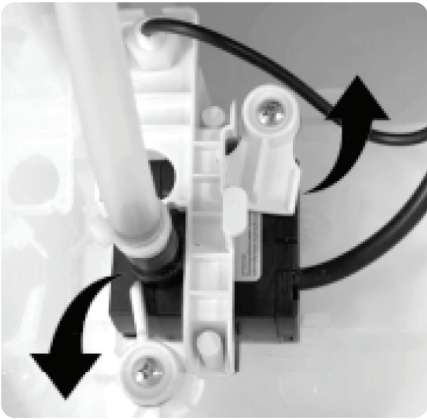

Step 3: Pull the water tank out completely for cleaning.



Step 4: After cleaning, place the water pump and the drain pipe back into the water tank. As shown in the illustration, snap the water pump into the water tank and turn the small knobs to secure it in place.

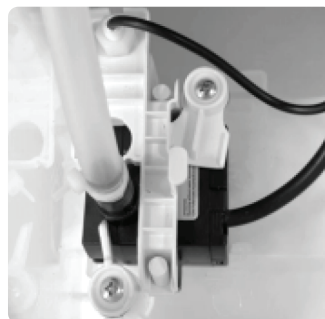


Step 5: Return the water tank to its original position, then turn the water tank lock from the horizontal position back to the vertical position.



FILLING THE WATER TANK


Water can be added through the upper or lower tank:

- Open the upper water tank cover and pour in water.
- Pull out the lower water tank to fill (see diagram).

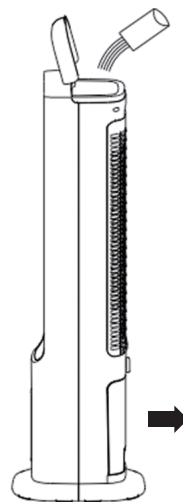


ATTENTION:

- Use clean water only. Do not use dirty or contaminated water.
Unplug the unit before refilling.
- Avoid splashing water near the motor or other internal parts.
- Maintain the water level between the "**Min**" and "**Max**" markings.
- When using the upper tank, pour slowly to avoid spills.

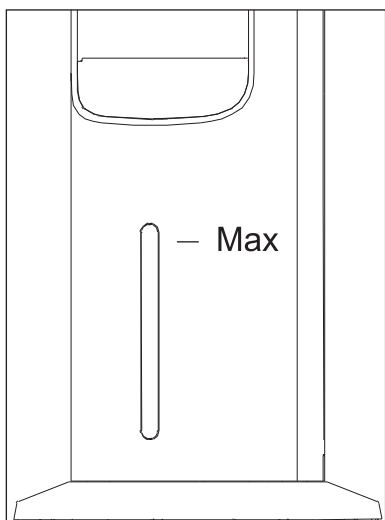

Do not exceed the maximum
water level.

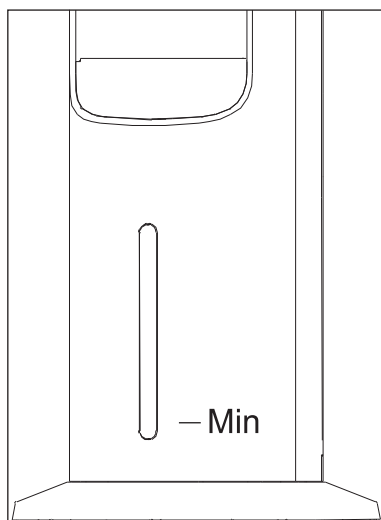

Do not let water drop below the
minimum level.

CONTROL PANEL

Place the unit on a firm, level surface and plug it in. The power indicator will light up in standby mode.



swing



mode



timer



cool



speed



ON/OFF



swing

Swing Button:

Press to activate oscillation. The swing icon will light up and the fan will move left to right. Press again to turn off and set airflow directionally.



mode

Mode Button:

Press to switch between modes:

- Normal Mode
- Natural Mode (fan speed changes randomly)
- Sleep Mode (speed lowers every 30 minutes until it reaches low and stays there)



timer

Timer Button:

Press to set a timer in 1-hour steps, up to 12 hours.



cool

Cooling Button:

Press to activate the cold air function. Press again to deactivate.



speed

Speed Button:

Press to cycle through low → medium → high speeds.
The default setting is low.





ON/OFF

On/Off Button:

Press once to start; press again to stop. The LED display will show the current room temperature when powered on.

REMOTE CONTROL

Note: Remove the plastic insulation film from the battery compartment before use.

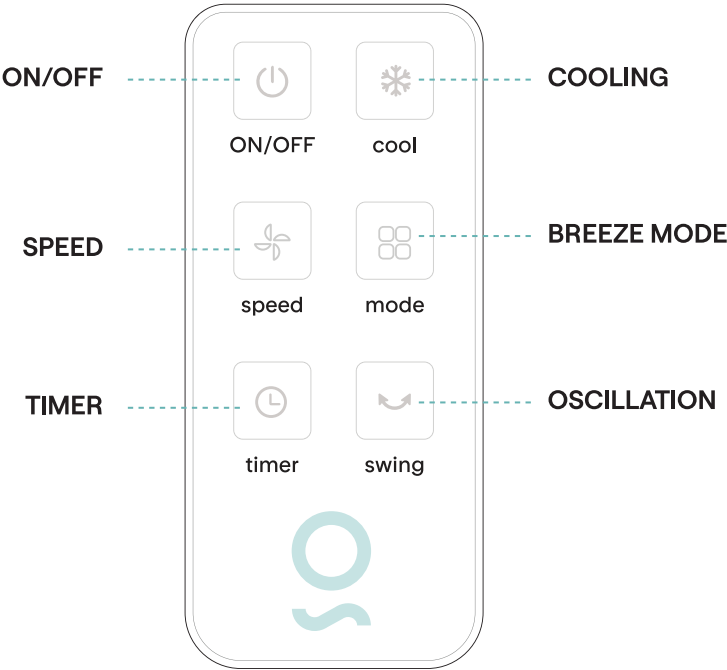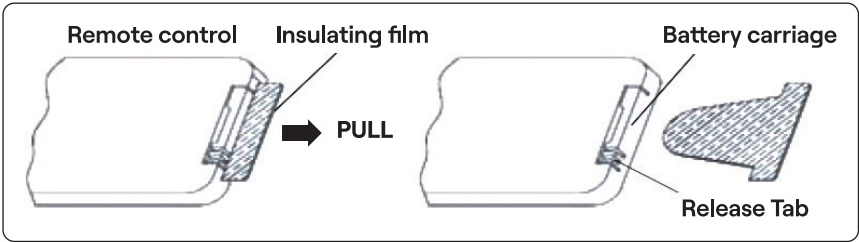

- Aim the remote directly at the receiver on the cooler.
- Maximum range is 16.4 ft (5 meters).
- Signal may weaken in areas with heavy machinery.
- Avoid blocking the line of sight between remote and receiver.
- Do not drop or hit the remote.

Wi-Fi Setup Guide

Installing the SereneLife: Smart Home App


1. Go to Google Play Store or Apple App Store and search for "Smart Home".




<https://links.serenelifehome.com/serenelife-app>

2. Open the app and register an account or log in.


- New users: Tap "Sign Up".
- Existing users: Log in with your Smart Home account credentials.


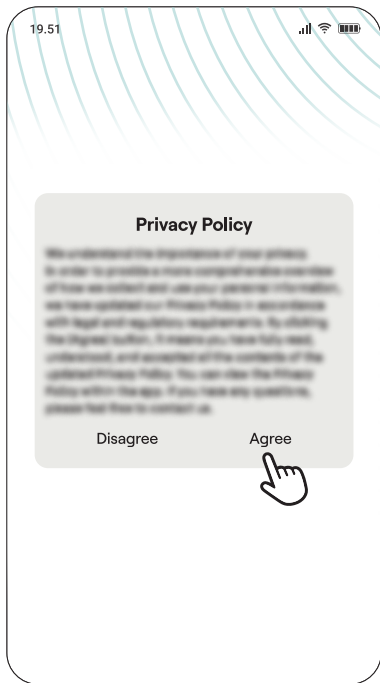


Tap on "Agree" to go to the registration page.

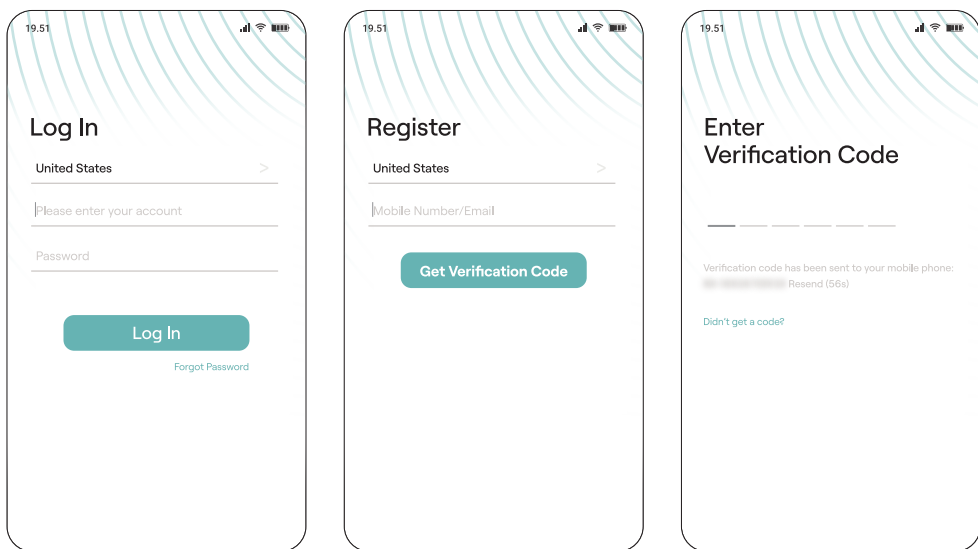

- Open the Smart Home app and tap "Add Device" or the "+" symbol.
- Select your device and enter the WiFi password of the network your smartphone is connected to.

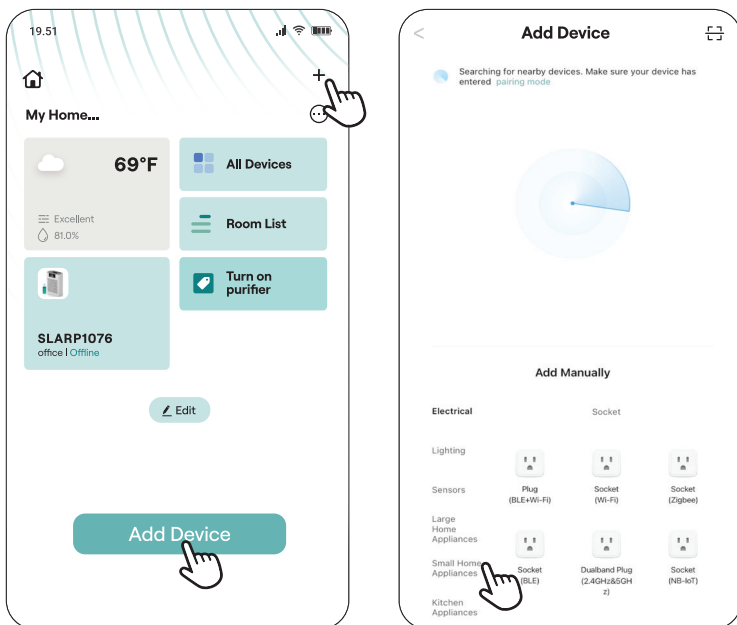

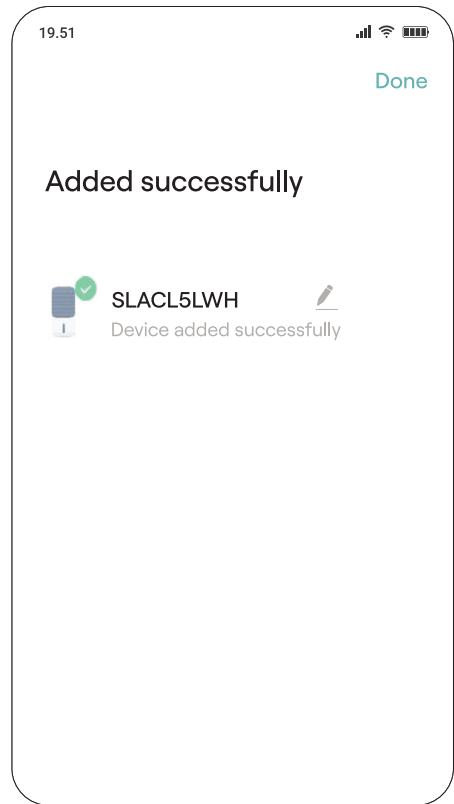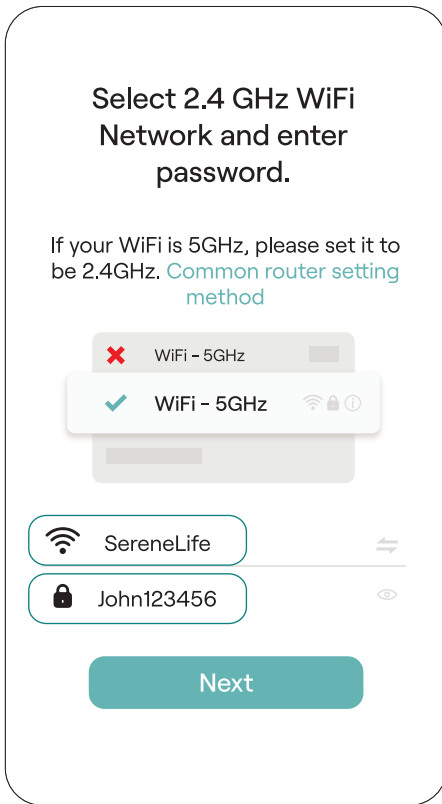

- Once pairing is complete, the device will appear in the app, and you can control it remotely.

HOW TO DISCONNECT WIFI FUNCTION

After the network has been successfully configured, press and hold the "⌘" button for 5 seconds to reset the network. The WiFi indicator will blink again. At this point, the WiFi function will be disconnected, and the user will need to reconfigure the network.

Battery Use

Initial Use: Pull the protective film to activate.

Replacing the Battery:

Open the battery compartment on the back and replace the battery with a new CR2025.

Battery Disposal:

Used batteries must be taken to a household hazardous waste collection site for safe disposal.


⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



STORAGE & MAINTENANCE GUIDELINES

1. Always unplug before cleaning.
2. Clean plastic parts with mild soap and a damp cloth or sponge.
3. Do not use strong detergents when cleaning the plastic housing.
4. Do not submerge or allow liquids to enter the motor.
5. Dry all parts completely before reassembling and reconnecting.
6. Store in a cool, dry place when not in use to prevent dust and dirt buildup.

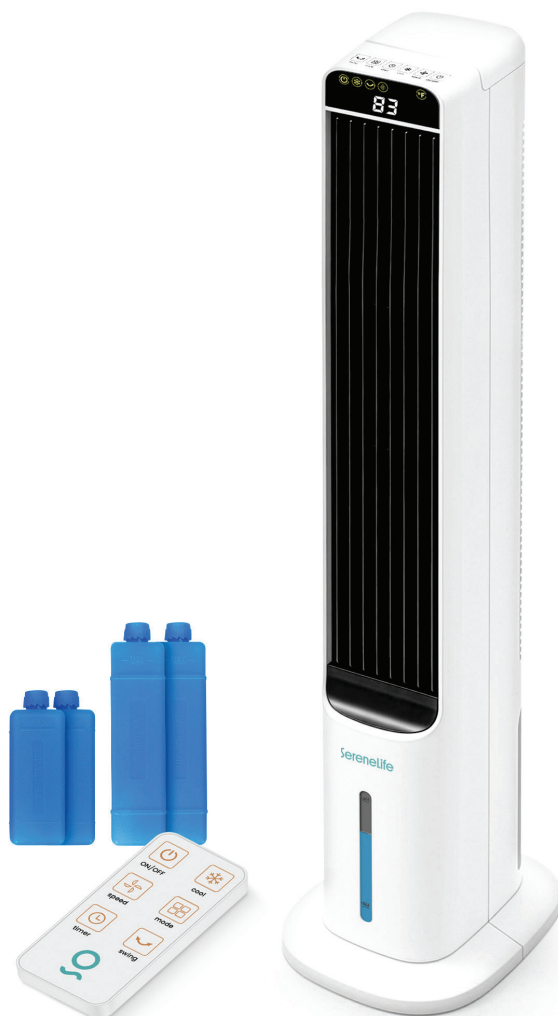

Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.

Start Here



Model Number:
SLACL5LWH

SereneLifehome.com/pages/register



questions? comments?

We are here to help!

Phone: 1.718.535.1800

[serenelifehome.com/contact us](https://serenelifehome.com/contact-us)