


QUICK START GUIDE


Must Read

1

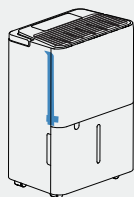

Remove the seal tape on the water tank before use.

2

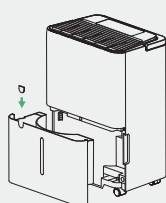

The tank seal chip is packed separately inside the water tank. Remove before use.

3



Keep all windows and doors **tightly closed** for optimal performance.


4




Recommended to run continuously for the **first 24 hours** of use.

5

Garden Hose Adapter Part Illustration

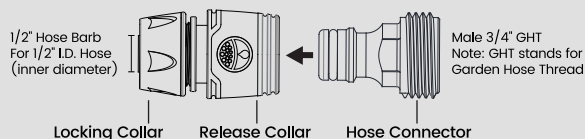

How to Connect the Garden Hose Adapter

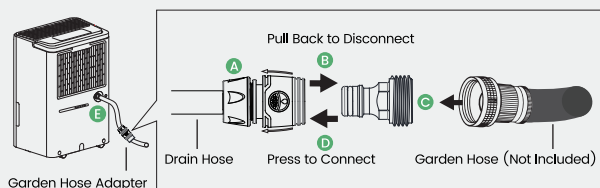

A Loosen the **Locking Collar** on the Garden Hose Adapter. Insert the included drain hose onto the 1/2" hose barb and push it in securely. Then tighten the **Locking Collar** to secure the hose.

B Pull back the **Release Collar** and remove the **Hose Connector** from the Adapter.

C Align the Male 3/4" GHT of the **Hose Connector** with the Female 3/4" GHT of your garden hose (not included) and screw them together securely.

D Push the **Hose Connector** back into the Garden Hose Adapter until it clicks into place.

E Connect the other end of the drain hose to the drain port of your dehumidifier.

Tips

- No worries if the dehumidifier is transported upside down—just place it upright and wait 24–48 hours before plugging it in.
- The flammable symbol is required by safety regulations. The dehumidifier is safe to operate under normal conditions—simply keep it away from open flames or sparks.
- When first powered on, the refrigerant needs 20–30 minutes to circulate. Water collection may be slow initially. Please allow the unit time to operate normally.



We may not be superheroes for life—but we can be your HERO for this dehumidifier. Just reach out anytime.

✉ support@waykar.com 📞 (213)-895-4871



How to Use

Check List Before Plugging it In


- ☐ Has the unit been kept upright for 24 hours?
- ☐ Is there at least 18" of clearance around the unit?
- ☐ Is the water tank properly seated?
- ☐ Is the room temperature between 41°F–90°F?
- ☐ Is the drain hose securely attached? If not using the hose, is the rubber plug properly inserted?

If everything checks out, plug in the dehumidifier and press [⏻] to turn it on.

Buttons & Symbols

Humidity Setting Range: Adjustable between 35% and 80% RH

In Comfort Mode, the display dims after 1 minute of inactivity and then turns off.

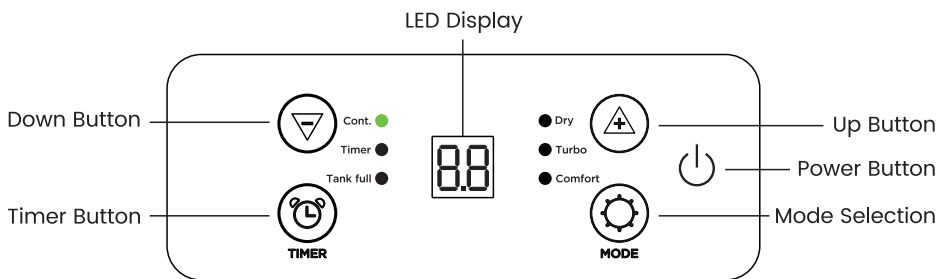

Mode	Dry Mode	Turbo Mode	Comfort Mode	Continuous Mode
Purpose	Efficiently removes moisture in humid conditions	Maximizes drying efficiency, ideal for laundry	Automatically maintains a comfortable humidity level for sleeping	Operates continuously at 15% RH to keep you space dry
Indicator	● Dry	● Turbo	● Comfort	Cont. ●
Fan Speed	Defaults to Low Not Adjustable	Defaults to High Not Adjustable	Defaults to Low Not Adjustable	Defaults to Low Not Adjustable
Default Humidity Display	Target Humidity Flickers, Then Converts to Space Humidity	Default 35% RH Flickers, Then Converts to Space Humidity.	Space Humidity Displayed	Default 15% RH Flickers, Then Converts to Space Humidity.
Humidity Setting	35%–80% RH Humidity Adjustable	35%–80% RH Humidity Adjustable	Not Manually Adjustable, Auto Change under Different Temp.	Not Adjustable
Timer Setting	Supported	Supported	Supported	Supported

COMMON TROUBLESHOOTING

Q: Why is the dehumidifier still running when the target humidity has been reached?

A: The compressor will pause when the room humidity drops below your target humidity by more than 5% RH, accounting for the ±5% RH deviation of the humidity sensor.

Q: Can I connect a garden hose directly to the drain port?

A: No. The drain port is not threaded for a garden hose. An adapter is included to connect the drain hose to a garden hose. (Garden hose not included.)